



## **Fronius Symo - Installation**

**10.0-3 208-240**

**12.0-3 208-240**

**10.0-3 480**

**12.5-3 480**

**15.0-3 480**

**15.0-3 208**

**17.5-3 480**

**20.0-3 480**

**22.7-3 480**

**24.0-3 480**

EN-US

Installation Instructions

Inverter for grid-connected photo-voltaic systems



42,0426,0202,EA 011-29072019



# Contents

Location selection and installation position .....	5
Safety Instructions Explanation.....	5
Safety.....	5
Intended Use.....	6
Location Selection.....	7
Installation position of the inverter .....	8
General Location Selection.....	9
Example: Installation of several inverters .....	10
Do not ground the solar modules.....	10
Power Line Communication (PLC) Transmitter .....	10
<b>Preparation</b> .....	<b>11</b>
Attaching the Mounting Bracket .....	13
Safety.....	13
Selecting Dowels and Screws.....	13
Screw recommendation .....	13
Opening the Inverter .....	13
Installing the Mounting Bracket on a Wall.....	14
Installing the Mounting Bracket on a Mast or Beam .....	15
Attaching the mounting bracket to a metal carrier .....	15
Do not warp or deform the mounting bracket.....	16
Knockouts .....	17
Safety.....	17
General .....	17
Knocking or Drilling Out Knockouts .....	18
<b>AC~</b> .....	<b>21</b>
Suitable Grids .....	23
Connecting the inverter to the public grid (AC side) .....	24
Safety.....	24
Permitted Cables .....	25
Preparing Aluminum Cables for Connection.....	26
Monitoring the grid .....	27
Fronius Symo 15.0-3 208 – ferrite ring .....	27
Connecting the Inverter to the Public Grid (AC).....	27
Maximum AC fuse protection.....	29
Additional external AC and/or DC disconnect.....	30
<b>DC=</b> .....	<b>31</b>
Notes on the Multi-MPP Tracker inverter.....	33
Multi MPP Tracker – Inverter .....	33
Connecting Solar Module Strings to the Inverter .....	34
Safety.....	34
String Fuses.....	35
Permitted Cables .....	36
General Information about Solar Modules .....	38
Connecting Aluminum Cables.....	38
Connecting Solar Module Strings to the Inverter .....	39
<b>Laying Solar.Net Cables</b> .....	<b>41</b>
Data communication .....	43
Lay data communication cables.....	43
Installing Datamanager in the Inverter .....	44
<b>Finally...</b> .....	<b>47</b>

Seal Conduits.....	49
Clipping the Inverter onto the Mounting Bracket.....	50
Clipping the Inverter onto the Mounting Bracket.....	50
Using for the first time .....	53
Using the Inverter for the First Time .....	53
<b>Options</b>	<b>55</b>
USB Stick as a Data Logger and for Updating Inverter Software .....	57
USB Flash Drive as a Data Logger.....	57
Data on the USB stick.....	57
Data Amount and Memory Capacity .....	58
Buffer Memory .....	59
Suitable USB Thumb Drives .....	59
USB Stick for Updating Inverter Software.....	60
Removing the USB Stick.....	60
Options.....	61
Options.....	61
OPTION 'ShadeCover' .....	61
<b>Service and Maintenance</b>	<b>63</b>
Notes on Maintenance .....	65
Maintenance .....	65
Cleaning.....	65

# Location selection and installation position

## Safety Instructions Explanation



### WARNING!

Indicates a potentially dangerous situation.

- ▶ Death or serious injury may result if appropriate precautions are not taken.



### CAUTION!

Indicates a situation where damage or injury could occur.

- ▶ Minor injury or damage to property may result if appropriate precautions are not taken.

### NOTE!

Indicates a possibility of flawed working results and possible damage to the equipment.

### IMPORTANT!

Indicates tips for correct operation and other particularly useful information.

It does not indicate a harmful or dangerous situation.

Please pay special attention when one of the symbols from the "Safety rules" chapter appears in these instructions.

## Safety



### WARNING!

**Danger from incorrect operation and work that is not carried out properly.**

This can result in severe personal injury and damage to property.

- ▶ Only qualified staff are authorized to commission the inverter and only within the scope of the respective technical regulations.
- ▶ Read the Installation Instructions and Operating Instructions before installation and commissioning.



### WARNING!

**Danger from work that is not carried out properly.**

This can result in damage to property and severe personal injury.

- ▶ The surge protection device should only be installed and connected by licensed electricians.
- ▶ Observe the safety rules!
- ▶ Prior to all installation and connection work, disconnect the AC and DC supply to the inverter.

### Fire Prevention

**⚠ CAUTION!**

**Danger due to faulty or incorrect installation.**

This may result in damage to inverters and other current-carrying parts of a photovoltaic system. Faulty or improper installation may cause overheating of cables and terminals as well as the formation of arcs. This could cause thermal damage, which in turn may lead to fires.



Please note the following when connecting the AC and DC cables:

- ▶ Securely tighten all terminals using the proper torque listed in the Operating Instructions
  - ▶ Securely tighten all grounding terminals (PE/GND) using the proper torque listed in the Operating Instructions, even for free grounding terminals
  - ▶ Do not overload cables
  - ▶ Check cables for damage and correct wiring
  - ▶ Follow all safety instructions, Operating Instructions, and any local connection regulations
- 
- ▶ Always secure the inverter to the mounting bracket with fixing screws using the torque specified in the Operating Instructions.
  - ▶ Only put the inverter into operation with the fixing screws securely tightened.

**Notice!** Fronius will not bear any costs for production downtimes, or for installations, etc., which may arise due to a detected electric arc and its consequences. Fronius accepts no liability for fires which may break out despite integrated arc detection/interruption (e.g., due to a parallel arc).

**Notice!** Before an inverter can be reset following a detected electric arc, check the entire affected photovoltaic system for any damage.

The manufacturer's specifications for connection, installation, and operation must be observed. You must carefully follow all installation steps and make all connections in accordance with specifications and regulations to minimize any risk of danger. The tightening torques for the respective terminals are listed in the Installation Instructions for the devices.

**Intended Use**

The inverter is designed exclusively to convert direct current from solar modules into alternating current and feed this power into the public grid.

The following are deemed to be not in conformity with its intended purpose:

- Utilization for any other purpose, or in any other manner
- Alternations to the inverter are not expressly recommended by Fronius
- Installation of components that are not expressly recommended or sold by Fronius.

The manufacturer is not responsible for any damage resulting from improper use. All warranty claims are considered void in such cases.

Proper use also means

- carefully reading and obeying the instructions and all the safety and danger notices in the Operating and Installation Instructions
- compliance with the maintenance operations
- installation as specified in the Installation Instructions


When configuring the photovoltaic system, make sure that all components are operating completely within their permitted operating range.

All measures recommended by the solar module manufacturer for maintaining solar module properties must be followed.


Follow all grid operator regulations regarding grid power feed and connection methods.

**Location Selection**

Please note the following criteria when choosing a location for the inverter:

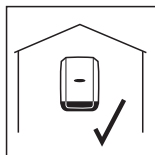


The inverter is suitable for indoor installation.

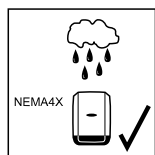

The inverter is suitable for outdoor installation.

Because of its NEMA 4X protection class, the inverter is not susceptible to hose water on any side and can also be operated in moist environments. However:

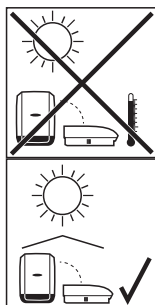

In order to keep inverter heating as low as possible, do not expose the inverter to direct sunlight. The inverter should be installed in a protected location, e.g., near the solar modules or under an overhanging roof.

10.0-3 - 12.0-3 208-240	
ft. (m)	$U_{DCmax}$
0 - 11154 ft. (0 - 3400 m)	600 V

**IMPORTANT!** The inverter must not be installed or operated above an altitude of 11,154 ft. (3400 m).

The maximum permissible DC voltage of the inverter depends on the altitude.

10.0-3 - 24.0-3 480	
ft. (m)	$U_{DCmax}$
> 9842 - 11154 ft. (> 3000 - 3400 m)	850 V
> 8202 - 9842 ft. (> 2500 - 3000 m)	900 V
> 6561 - 8202 ft. (> 2000 - 2500 m)	950 V
0 - 6561 ft. (0 - 2000 m)	1000 V

$U_{DCmax}$  at an altitude of:

**Symo 10.0-3 – 12.0-3 208–240**

0 to 11,154 ft ( 0 to 3400 m). = 600 V


**Symo 10.0-3 – 24.0-3 480**

0 to 6561 ft ( 0 to 2000 m). = 1000 V

6531 to 8202 ft (2000 to 2500 m). = 950 V

8202 to 9842 ft (2500 to 3000 m). = 900 V

9842 to 11,154 ft (3000 to 3400 m). = 850 V

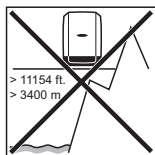

The output power reduces when the device temperature is too high, and this may occur earlier than normal at increased altitudes.



Do not install the inverter:

- where it may be exposed to ammonia, corrosive gases, acids, or salts (e.g., fertilizer storage areas, vent openings for livestock stables, chemical plants, tanneries)



During certain operating phases the inverter may produce a slight noise. For this reason, it should not be installed in an occupied living area.



Do not install the inverter in:

- areas where there is an increased risk of accidents from farm animals (horses, cattle, sheep, pigs, etc.)
- Stables or adjoining areas
- storage areas for hay, straw, chaff, animal feed, fertilizers, etc.



The inverter is designed to be dustproof in principle. However, in areas of high dust accumulation, the cooling surfaces can become dusty, which can impair the thermal performance. In this case, the dust must be removed regularly. We therefore recommend that installation is not carried out in areas and environments with high dust accumulation (e.g., iron filings) as this can cause damage to the inverter.



Do not install the inverter in:

- Greenhouses
- Storage or processing areas for fruit, vegetables, or viticulture products
- Areas used in the preparation of grain, green fodder, or animal feeds

### Installation position of the inverter



The inverter is suitable for vertical installation on a vertical wall or column.



The inverter is suitable for a horizontal installation position.



The inverter is suitable for installation on a sloping surface.



Do not install the inverter on a sloping surface with the connections upwards.




Do not install the inverter in a sloping position on a vertical wall or column.



Do not install the inverter in a horizontal position on a vertical wall or column.



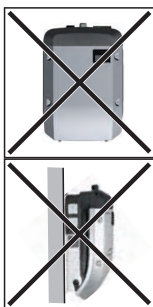

Do not install the inverter with the connections upwards on a vertical wall or column.



Do not install the inverter overhanging with the connections upwards.




Do not install the inverter overhanging with the connections downwards.



Do not install the inverter on the ceiling.

**General Location Selection**

Please note the following criteria when choosing a location for the **inverter**:

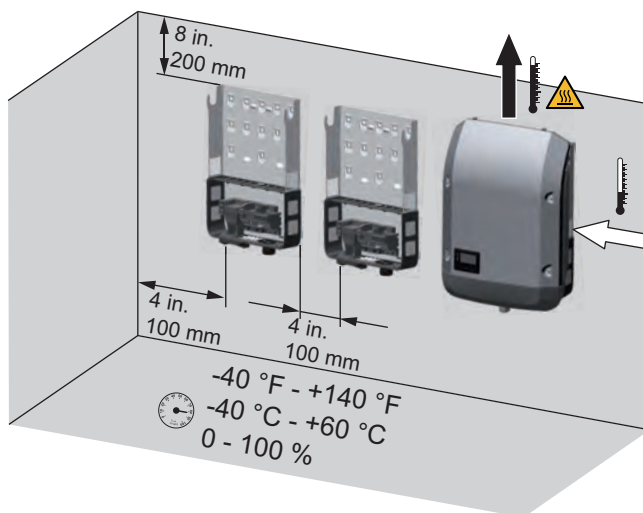

Only install on a solid, non-flammable surface

Max. ambient temperatures: -40 °F/+140 °F (-40 °C/+60 °C)

Relative humidity: 0–100%


The air flow direction within the inverter is from right to top (cold air intake on the right, hot air outflow at the top). The waste air may reach a temperature of up to 70 °C.

When installing the inverter in a switch cabinet or similar closed environment, it is necessary to make sure that the hot air that develops will be dissipated by forced-air ventilation.


If you wish to install the inverter on the outer walls of cattle stables, it is important to keep a minimum clearance of 2 m between all sides of the inverter and air vents and other openings.

The place of installation should not be exposed to ammonia, corrosive gases, salts, or acids.

**Example: Installation of several inverters**

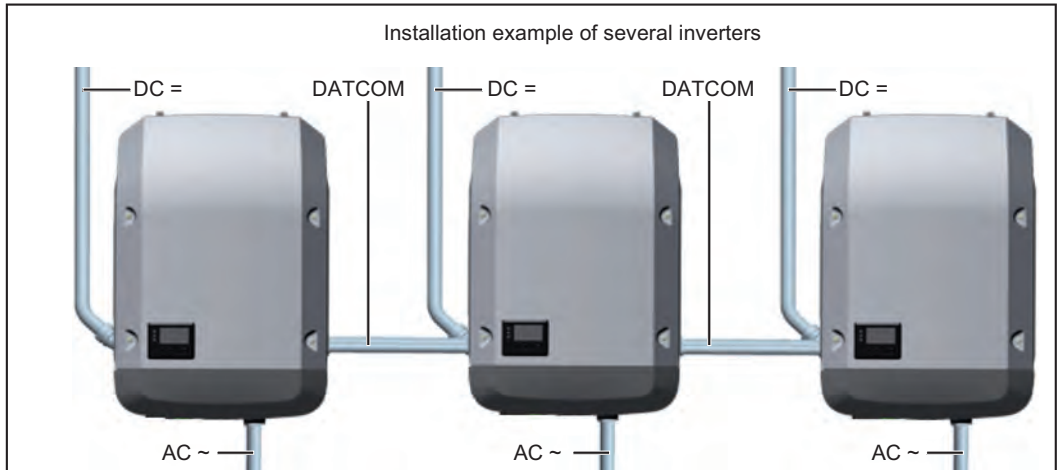

**Do not ground the solar modules.**

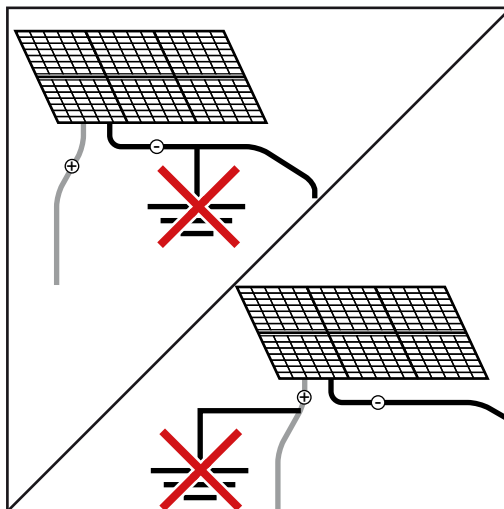

The inverter is designed exclusively for connection to and use with non-grounded solar modules. The solar modules must not be grounded at either the positive or negative pole.

**Power Line Communication (PLC) Transmitter**

This inverter is equipped with a Power Line Communication (PLC) Transmitter on the DC side.

The purpose is to provide Rapid Shutdown acc. to NEC Edition 2017 Art. 690.12. The PLC is implemented according to the Specification "Communication Signal for Rapid Shutdown - SunSpec Interoperability Specification". Details can be found at [www.sunspec.org](http://www.sunspec.org)

To ensure compliance with all regulations applicable in your country and to provide best reception at the receivers, please follow the recommendations below:

- Keep distance between DC+ and DC- Conductors as close as possible
- Avoid cable loops of excessive cables (coiling).
- Use metallic raceways where possible
- Do not run DC cables from different inverters in the same raceway or cable tray.

# Preparation



# Attaching the Mounting Bracket

## Safety



### WARNING!

#### **Danger of residual voltage from capacitors.**

An electric shock can be fatal.

- ▶ Wait until the capacitors have discharged. Discharge takes 5 minutes.



### CAUTION!

#### **Danger due to soiling or water on the terminals and contacts in the connection area.**

This may result in damage to the inverter.

- ▶ When drilling, make sure that terminals and contacts in the connection area do not become soiled or wet.
- ▶ The mounting bracket without integrated inverter does not correspond to the degree of protection according to the data sheet. For this reason do not leave the mounting bracket exposed to environmental influences without the inserted inverter.
- ▶ Protect the mounting bracket from soiling and moisture during installation.

### NOTE!

#### **Protection class NEMA4X is only ensured when the inverter is mounted and firmly screwed into the mounting bracket.**

The mounting bracket without inverter and ventilation channel has no NEMA protection.

## Selecting Dowels and Screws

**Important!** Depending on the surface, different mounting materials may be required for installing the mounting bracket. These mounting materials are not part of the scope of delivery for the inverter. The installer is responsible for selecting the proper mounting materials.

## Screw recommendation

For the installation of the inverter we recommend steel or aluminum screws with a diameter of 0.2–0.3 in. (6–8 mm).

## Opening the Inverter







### WARNING!

#### **Danger due to inadequate ground conductor connection.**



This can result in severe personal injury and damage to property.


- ▶ The housing screws provide an adequate ground conductor connection for grounding the housing and should not be replaced under any circumstances by other screws that do not provide a reliable ground conductor connection.

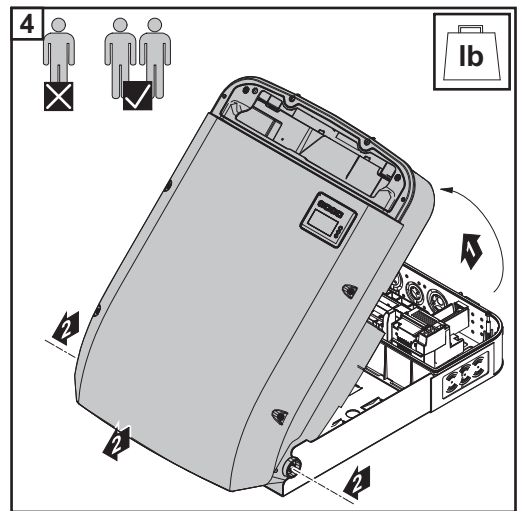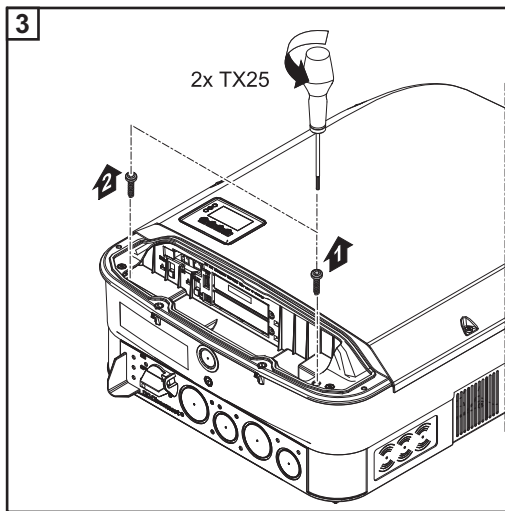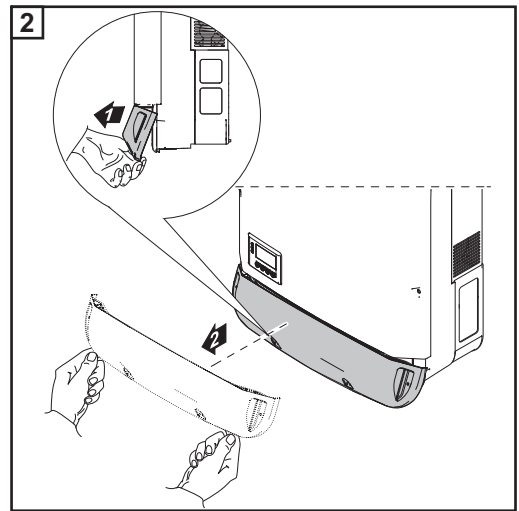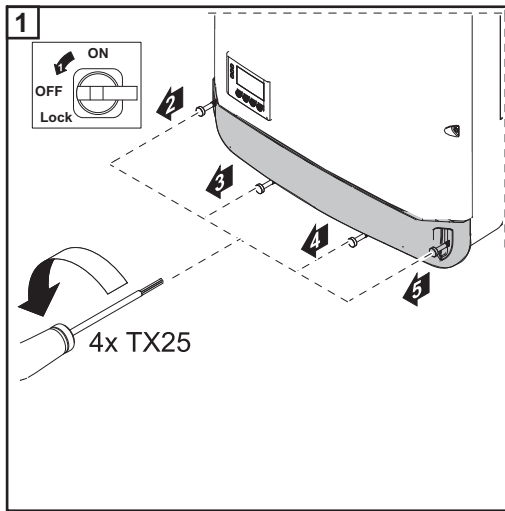


### Installing the Mounting Bracket on a Wall

The mounting bracket must be secured in at least four places.

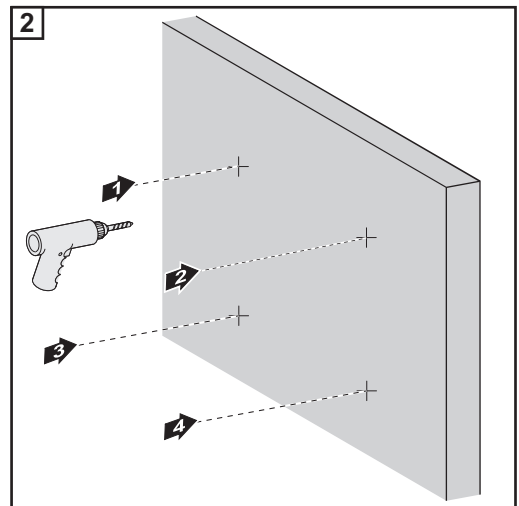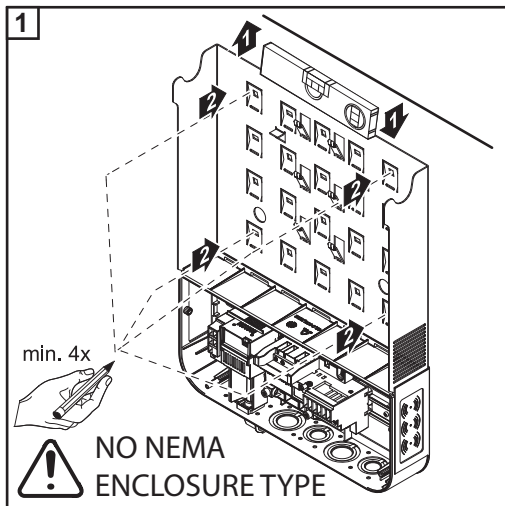

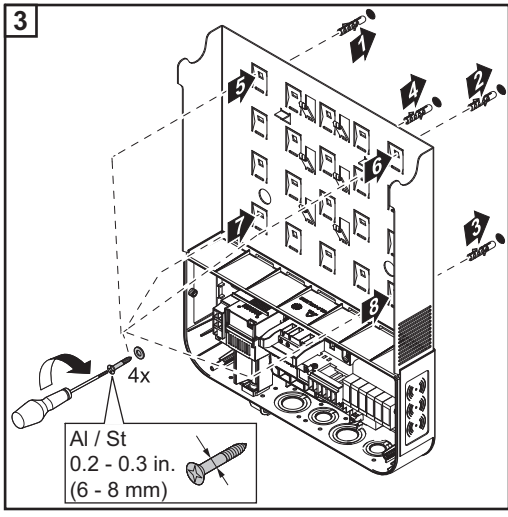


**Installing the Mounting Bracket on a Mast or Beam**

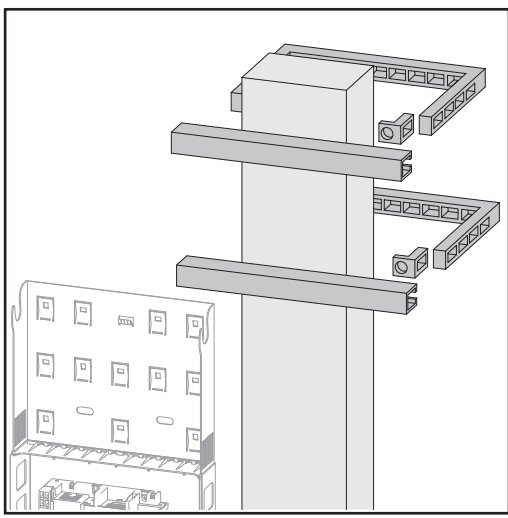

For installation of the inverter on a mast or beam, Fronius recommends using the "Pole clamp" (order no. SZ 2584.000) mast mounting kit from Rittal GmbH. The kit can be used to mount the inverter on round or rectangular masts with the following diameters:  $\varnothing$  from 40 to 190 mm (round mast),  $\square$  from 50 to 150 mm (rectangular mast)



**Attaching the mounting bracket to a metal carrier**

The mounting bracket must be secured in at least four places.

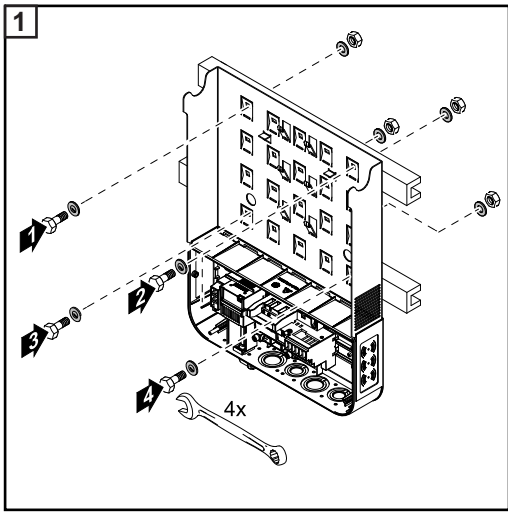

**Do not warp or deform the mounting bracket**

**Notice!** When attaching the mounting bracket to the wall or to a column, make sure that the mounting bracket is not warped or deformed.

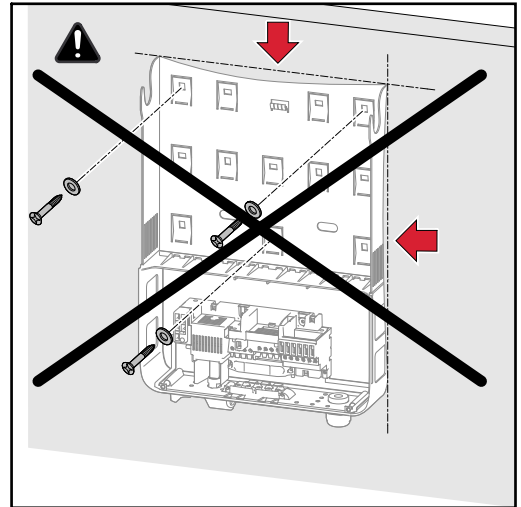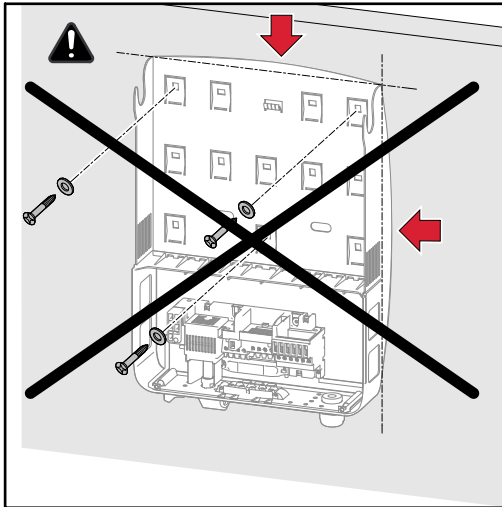



# Knockouts

## Safety


**NOTE!**

When using the cable inlets at the back, take care to seal them according to protection class NEMA4X before operating outdoors.

**NOTE!**

When installing outdoors, only use waterproof conduit fittings and conduits. Conduit fittings and conduits are not part of the scope of supply for the inverter.

## General

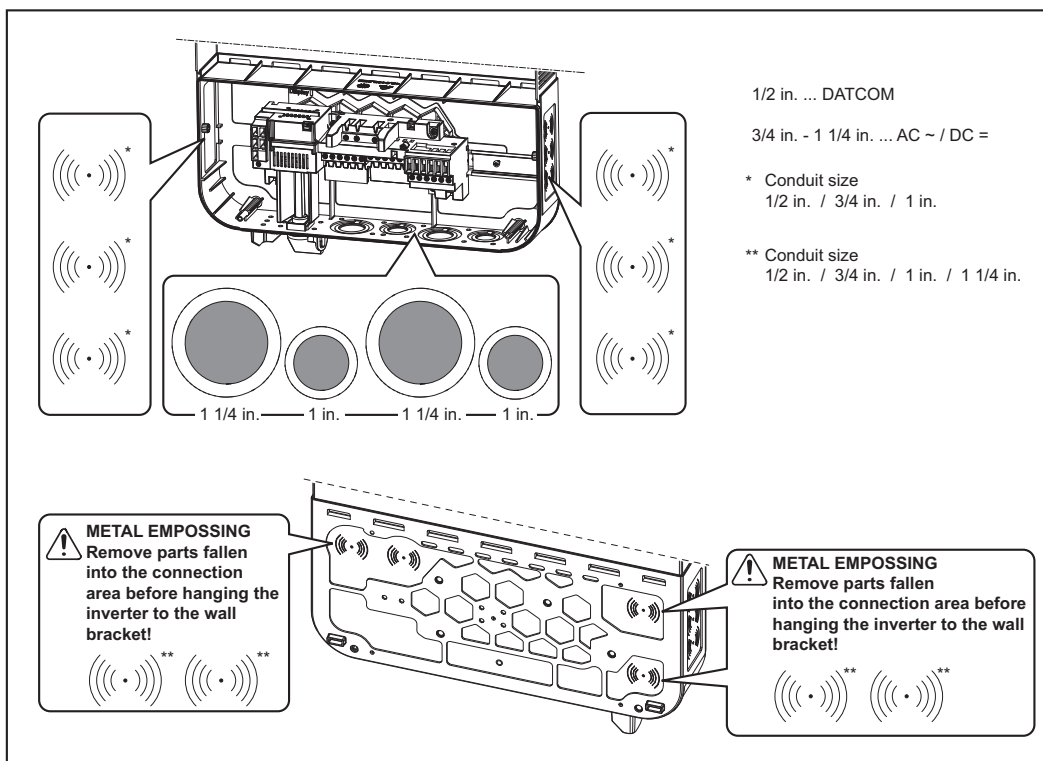

The wall bracket contains several knockouts of different sizes. When knocked out, the openings are used for the inputs of various wires.

1/2 in. for data communication cable (DATCOM)

3/4 in. - 1 1/4 in. for AC and DC cables

\* A grounding electrode terminal (GET) may be required depending on local regulations.

The cable for the grounding electrode terminal can be fed through the designated opening on the underside of the wall bracket.

**IMPORTANT!** The knockouts on the rear of the wall bracket are made of metal.



## CAUTION!

### Danger of short circuit from loose metal parts from knockouts.

Loose metal parts in the inverter may cause short circuits when the inverter is powered up. When removing knockouts, make sure that

- ▶ no loose metal parts fall into the connection area of the inverter,
- ▶ any metal pieces that do fall into the connection area are removed immediately.

## Knocking or Drilling Out Knockouts

**IMPORTANT!** The knockouts on the underside of the mounting bracket may be knocked out using a hammer or screwdriver, drilled out using a step drill, or opened using a hole punch. The side knockouts and the knockouts at the back may only be drilled out with a step drill or opened with a hole punch.

**IMPORTANT!** You should only remove the minimum number of knockouts required for the available cables.




Use suitable eye protection when knocking/drilling out the knockouts.

Only knock out knockouts using a hammer or screwdriver from the inside outwards.

Only use suitable step drills to drill out the knockouts. Do not use spiral drills for drilling out!

Only drill out knockouts using a step drill from the outside inwards.

When drilling out using a step drill, ensure that the inside of device (e.g. connection block) is not damaged.






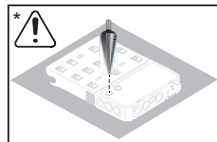


When drilling out the knockouts at the back, place the mounting bracket on an even surface with the back upwards so that shavings and pieces of metal can fall out of the mounting bracket.

Attach appropriate conduits to all knocked/drilled out knockouts. In the event of installation outside, only use watertight conduits and conduit fittings.

Conduits and conduit fittings are not included with the inverter.

If necessary, deburr the number of knockouts required with a suitable tool.

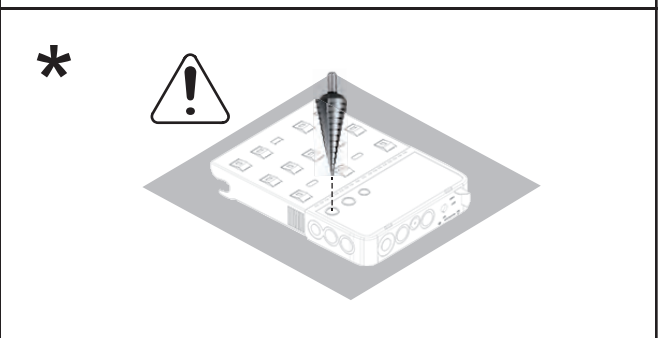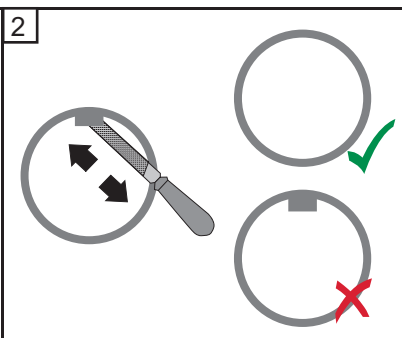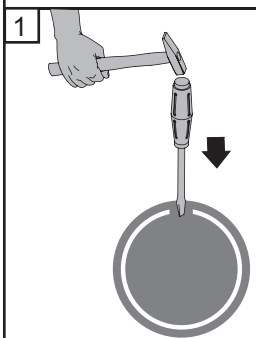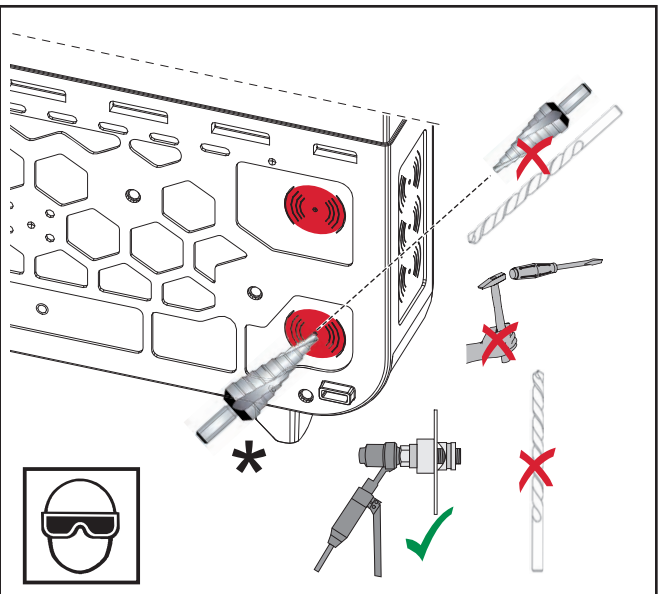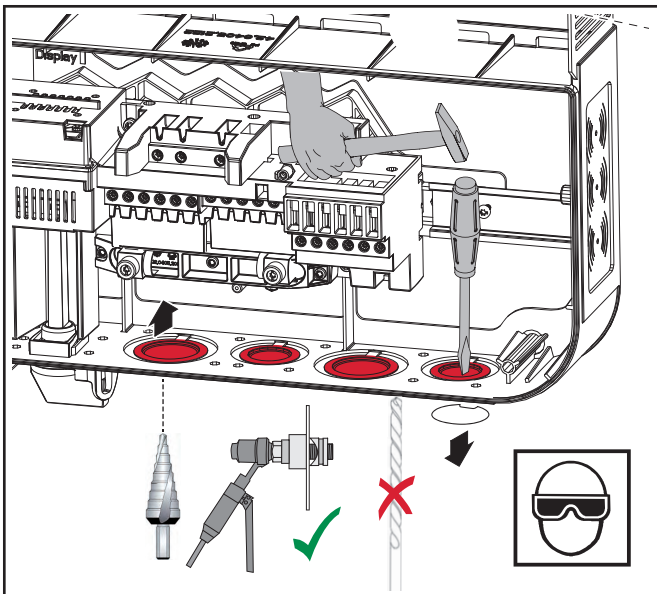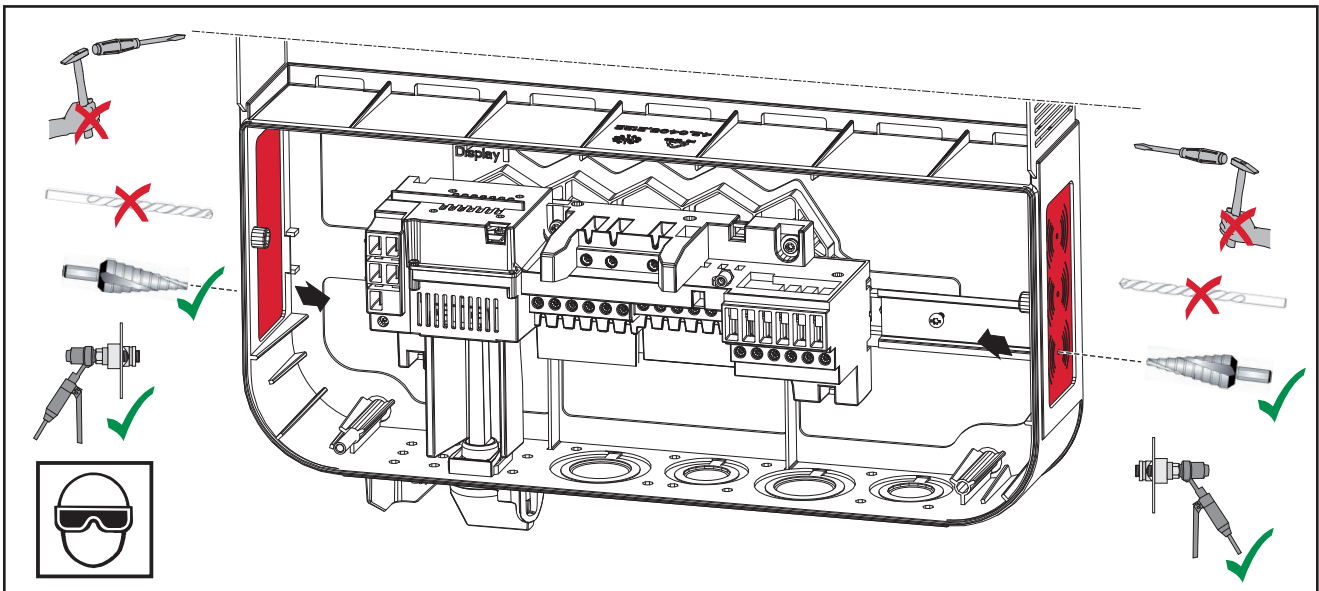



**AC~**




# Suitable Grids

**Delta** No neutral conductor

Setup: Nominal voltage:  
 208 208 V  
 240 240 V  
 220 220 V  
 BR 220 V  
 50 Hz 50 Hz 208–240 V

Appropriate inverter:  
 Symo 10.0-3 208–240 /  
 12.0-3 208–240 / 15.0-3  
 208

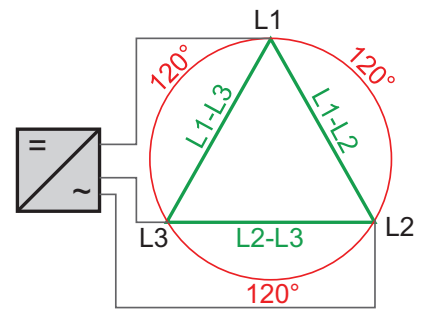


MG 3P Microgrid 208 V  
 MG 1P Microgrid 240 V

**WYE** Neutral conductor required

Setup: Nominal voltage:  
 208 N 208 V  
 220 N 220 V  
 BR N 220 V  
 50 HN 50 Hz 208–240 V  
 HI2 208 V

Appropriate inverter:  
 Symo 10.0-3 208–240 /  
 12.0-3 208–240 / 15.0-3  
 208

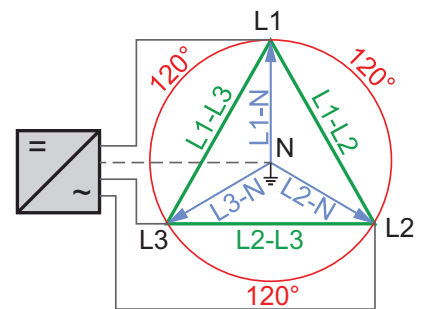

480 N 480 V  
 440 N 440 V  
 50 HN 50 Hz 415 V

Symo 10.0-3 480 / 12.5-3  
 480 / 15.0-3 480 / 17.5-3  
 480 / 20.0-3 480 / 22.7-3  
 480 / 24.0-3 480


MG 3N Microgrid 208 V  
 MG 2N Microgrid 50 Hz 208–240 V  
 MG 5N Microgrid 50 Hz 480 V  
 MG 6 Microgrid 480 V

CAL3 480 V  
 HI3 480 V

**Hi-Leg Delta** Neutral conductor required

Setup: Nominal voltage:  
 240 N 240 V  
 50 HN 50 Hz 208–240 V

Appropriate inverter:  
 Symo 10.0-3 208–240 /  
 12.0-3 208–240

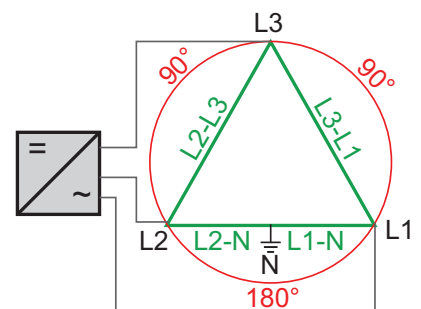

MG 1N Microgrid 240 V  
 MG 2N Microgrid 50 Hz 208–240 V

HI1 208 V

# Connecting the inverter to the public grid (AC side)

---

## Safety



### WARNING!

#### **Danger from grid voltage and DC voltage from solar modules that are exposed to light.**

An electric shock can be fatal.

- ▶ Prior to all connection work, disconnect the AC and DC supply to the inverter.
  - ▶ The DC main switch is used only to switch off power to the power stage set. When the DC main switch is turned off, the connection area is still energized.
  - ▶ Maintenance and service work on the inverter power stage set should only be carried out by Fronius-trained service technicians.
  - ▶ All maintenance and service work should only be carried out when the inverter and the mounting bracket have been disconnected from each other.
  - ▶ The inverter must only be disconnected from the mounting bracket after being disconnected from the mains power.
  - ▶ Only an authorized electrician is permitted to connect this inverter to the public grid.
- 



### WARNING!

#### **Inadequately sized electrical components can cause serious injury and damage to property.**

An electric shock can be fatal.

- ▶ All electrical connections must be made in accordance with the national standard (e.g., for the US National Electrical Code, ANSI/NFPA 70) and any other regulations applicable to the installation site.
  - ▶ Use min. 194 °F (90 °C) copper wire for all grounding wires (see NEC table 250.122).
  - ▶ For all AC/DC wires, use a minimum of 167 °F (75 °C).
  - ▶ Voltage drop and other considerations, such as improving power quality, may mean larger cable cross sections need to be used.
- 



### WARNING!

#### **Danger from work that is not carried out properly**

This can result in damage to property and severe personal injury.

- ▶ The surge protection device should only be installed and connected by licensed electricians.
  - ▶ Observe the safety rules!
  - ▶ Prior to all installation and connection work, disconnect the AC and DC supply to the inverter.
- 



### CAUTION!

#### **Danger due to improperly connected terminals.**

This may result in thermal damage to the inverter, which in turn may lead to fires.

- ▶ When connecting the AC and DC cables, make sure that all terminals are tightened securely using the proper torque.
-



**NOTE!**

**When connecting aluminum cables:**

- ▶ Follow all national and international guidelines regarding the connection of aluminum cables.
- ▶ Follow the instructions of the cable manufacturer, especially the note about whether an annual check to ensure that the cables are firmly attached should be performed.

**NOTE!**


Form a min. 4 in. (100 mm) cable loop with all cables.

**NOTE!**

**To ensure that the inverter operates without any problems:**

- ▶ Make sure that the grid's neutral conductor is grounded. For insulated networks (without grounding), this is not the case, and operation of the inverter is not possible.
- ▶ A neutral conductor is required for measurement purposes when operating the inverter. The neutral conductor must have a current carrying capacity of at least 1 A.

**Permitted Cables** AC cables with the following design can be connected to the AC terminals of the inverter:

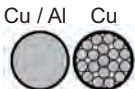- 
- Copper (Cu) or aluminum (Al): round, solid
  - Copper: round, stranded, up to conductor class 4

**AC & DC = copper cables (Cu)**

The following wire combinations can be used for wiring.  
Select a sufficiently large cable cross-section based on the actual device output!

AWG round	AWG stranded	AWG stranded/round			AWG round/round				AWG stranded/stranded			
4 <sup>2)</sup>												
6 <sup>2)</sup>	6/6 <sup>4)</sup>									6/12 <sup>2)</sup>	6/14 <sup>2)</sup>	6/16 <sup>3)</sup>
8 <sup>2)</sup>	8 <sup>1)</sup>	8/10 <sup>1)</sup>	8/12 <sup>1)</sup>	8/14 <sup>1)</sup>		8/12 <sup>2)</sup>			8/10 <sup>2)</sup>	8/12 <sup>1)</sup>	8/14 <sup>1)</sup>	8/16 <sup>3)</sup>
10 <sup>2)</sup>	10 <sup>1)</sup>				10/10 <sup>1)</sup>	10/12 <sup>1)</sup>	10/14 <sup>1)</sup>		10/10 <sup>1)</sup>	10/12 <sup>1)</sup>	10/14 <sup>1)</sup>	10/16 <sup>3)</sup>
12 <sup>2)</sup>	12 <sup>1)</sup>				12/10 <sup>1)</sup>	12/12 <sup>1)</sup>	12/14 <sup>1)</sup>	12/16 <sup>1)</sup>	12/10 <sup>1)</sup>	12/12 <sup>1)</sup>	12/14 <sup>1)</sup>	12/16 <sup>1)</sup>
14 <sup>2)</sup>	14 <sup>1)</sup>				14/10 <sup>1)</sup>	14/12 <sup>1)</sup>	14/14 <sup>1)</sup>	14/16 <sup>1)</sup>	14/10 <sup>1)</sup>	14/12 <sup>1)</sup>	14/14 <sup>1)</sup>	14/16 <sup>1)</sup>
16 <sup>3)</sup>	16 <sup>3)</sup>						16/14 <sup>1)</sup>	16/16 <sup>1)</sup>	16/10 <sup>3)</sup>	16/12 <sup>1)</sup>	16/14 <sup>1)</sup>	16/16 <sup>1)</sup>

**AC & DC = aluminum cables (Al)**

The following wire combinations can be used for wiring.  
Select a sufficiently large cable cross-section based on the actual device output!

AWG round	AWG stranded	AWG stranded/round			AWG round/round				AWG stranded/stranded			
4 <sup>2)</sup>												
6 <sup>2)</sup>	6 <sup>4)</sup>									6/12 <sup>2)</sup>	6/14 <sup>2)</sup>	6/16 <sup>5)</sup>
8 <sup>2)</sup>	8 <sup>2)</sup>	8/10 <sup>2)</sup>	8/12 <sup>2)</sup>	8/14 <sup>2)</sup>		8/12 <sup>2)</sup>			8/10 <sup>2)</sup>	8/12 <sup>2)</sup>	8/14 <sup>2)</sup>	8/16 <sup>5)</sup>

**AC & DC = aluminum cables (Al)**

The following wire combinations can be used for wiring.

Select a sufficiently large cable cross-section based on the actual device output!

AWG round	AWG stranded	AWG stranded/round			AWG round/round				AWG stranded/stranded			
10 <sup>2)</sup>	10 <sup>2)</sup>				10/10 <sup>2)</sup>	10/12 <sup>2)</sup>	10/14 <sup>2)</sup>		10/10 <sup>2)</sup>	10/12 <sup>2)</sup>	10/14 <sup>2)</sup>	10/16 <sup>5)</sup>
12 <sup>2)</sup>	12 <sup>2)</sup>				12/10 <sup>2)</sup>	12/12 <sup>2)</sup>	12/14 <sup>2)</sup>		12/10 <sup>2)</sup>	12/12 <sup>2)</sup>	12/14 <sup>2)</sup>	12/16 <sup>2)</sup>
14 <sup>2)</sup>	14 <sup>2)</sup>				14/10 <sup>2)</sup>	14/12 <sup>2)</sup>	14/14 <sup>2)</sup>	14/16 <sup>2)</sup>	14/10 <sup>2)</sup>	14/12 <sup>2)</sup>	14/14 <sup>2)</sup>	14/16 <sup>2)</sup>
16 <sup>5)</sup>	16 <sup>5)</sup>						16/14 <sup>2)</sup>	16/16 <sup>2)</sup>	16/10 <sup>5)</sup>	16/12 <sup>2)</sup>	16/14 <sup>2)</sup>	16/16 <sup>2)</sup>

- 1) tested and inspected as per UL
- 2) not inspected as per UL; connection possible
- 3) with ferrules only
- 4) use stranded PV (ZKLA) or 2-wire
- 5) not inspected as per UL; connection possible; AWG 16 with ferrules only

**Minimum AWG as per NEC**

		10.0-3 208-240	12.0-3 208-240	15.0-3 208
Copper (Cu)/aluminum (Al)	208 V <sub>AC</sub>	AWG 10/AWG 10	AWG 10/AWG 8	AWG 8/AWG 6
	220 V <sub>AC</sub>	AWG 10/AWG 10	AWG 10/AWG 8	
	240 V <sub>AC</sub>	AWG 12/AWG 10	AWG 10/AWG 10	

		10.0-3 480	12.5-3 480	15.0-3 480
Copper (Cu)/aluminum (Al)	440 V <sub>AC</sub>	AWG 14/AWG 12	AWG 14/AWG 12	AWG 14/AWG 12
	480 V <sub>AC</sub>	AWG 14/AWG 12	AWG 14/AWG 12	AWG 14/AWG 12

		17.5-3 480	20.0-3 480	22.7-3 480
Copper (Cu)/aluminum (Al)	440 V <sub>AC</sub>	AWG 12/AWG 10	AWG 10/AWG 10	AWG 10/AWG 8
	480 V <sub>AC</sub>	AWG 14/AWG 12	AWG 12/AWG 10	AWG 10/AWG 10

		24.0-3 480
Copper (Cu)/aluminum (Al)	480 V <sub>AC</sub>	AWG 10/AWG 10

**Preparing Aluminum Cables for Connection**

The AC-side terminals are designed for connecting single-wire, round aluminum cables. Due to the reaction of aluminum with air that creates a tough, non-conductive oxide layer the following points must be considered when connecting aluminum cables:

- Reduced rated currents for aluminum cables
- The connection requirements listed below

Always follow the instructions of the cable manufacturer when using aluminum cables.

Take into account local specifications when configuring cable cross sections.

**Connection Requirements:**

- 1** Carefully clean off the oxide layer of the stripped end of the cable, e.g., using a knife

**IMPORTANT!** Do not use brushes, files, or sandpaper; aluminum particles may get stuck and can transfer to other cables.


- 2 After removing the oxide layer of the cable end, rub in a neutral grease, e.g., acid-free and alkali-free Vaseline
- 3 Then immediately connect it to the terminal

**IMPORTANT!** Repeat the steps above whenever the cable is disconnected and then re-connected.

### Monitoring the grid

The resistance in the leads to the AC-side connection terminals must be as low as possible for optimal functioning of grid monitoring.

### Fronius Symo 15.0-3 208 – ferrite ring

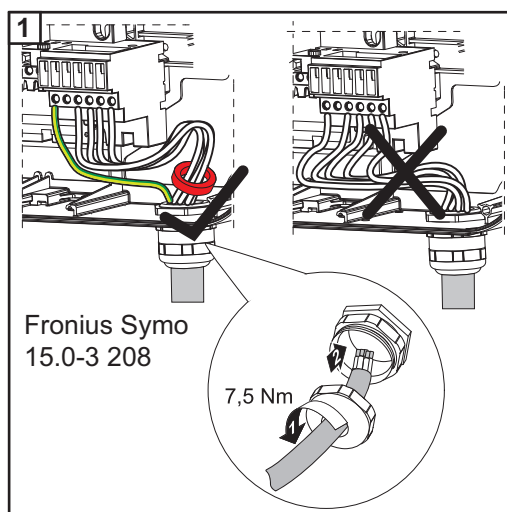

Fronius Symo 15.0-3 208

With Fronius Symo 15.0-3 208, the three phases and neutral conductor must be fed through a ferrite ring. The ferrite ring is included in the scope of delivery for the inverter.

The ground conductor (PE) must not be fed through the ferrite ring.

### Connecting the Inverter to the Public Grid (AC)

#### NOTE!





To ensure a proper ground connection, all grounding terminals GND must be tightened with the specified torque during installation.

#### NOTE!

Form loops of at least 4 in. (102 mm) in the AC cables when connecting them to the AC terminals.


**IMPORTANT!** The ground conductor GND of the AC cable must be laid so that it is disconnected last.

Measure the ground conductor GND longer, for example, and loop.

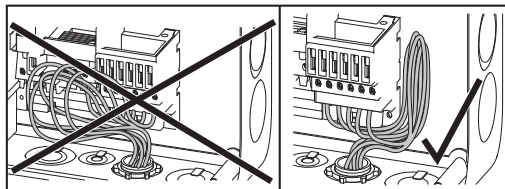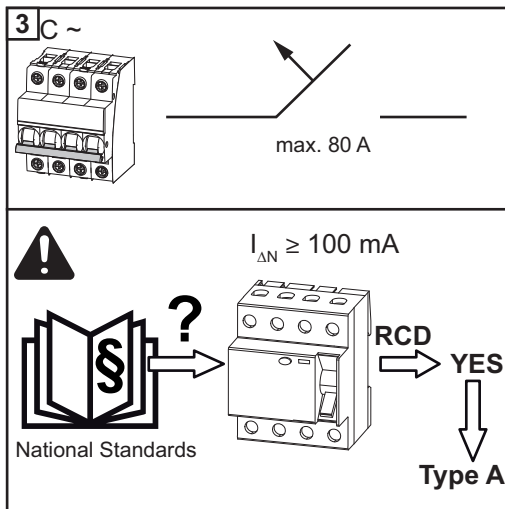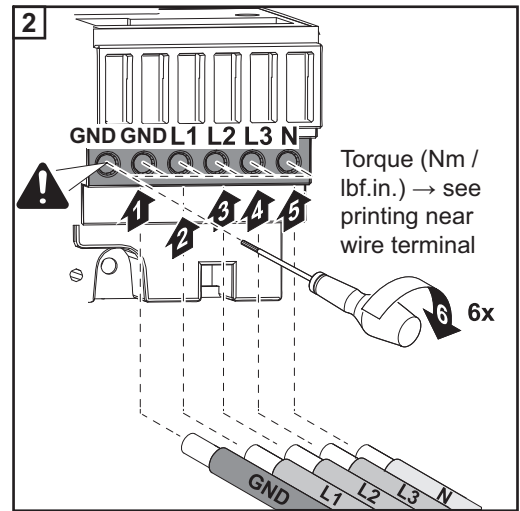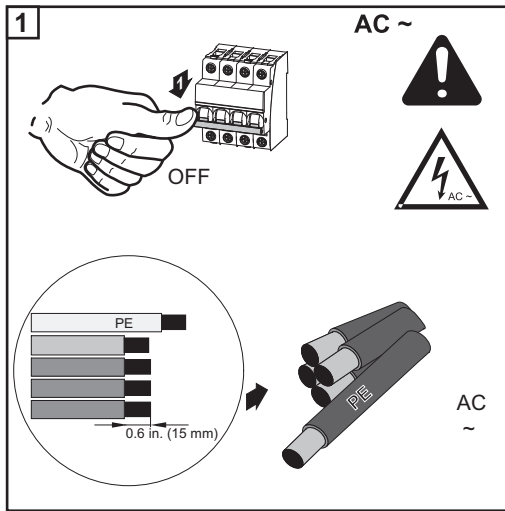

If AC cables are laid over the shaft of the DC main switch or across the DC main switch connection block, the cables may be damaged when the inverter is pivoted or the inverter may not be able to be pivoted.


**IMPORTANT!** Do not lay AC cables over the shaft of the DC main switch or across the DC main switch connection block!

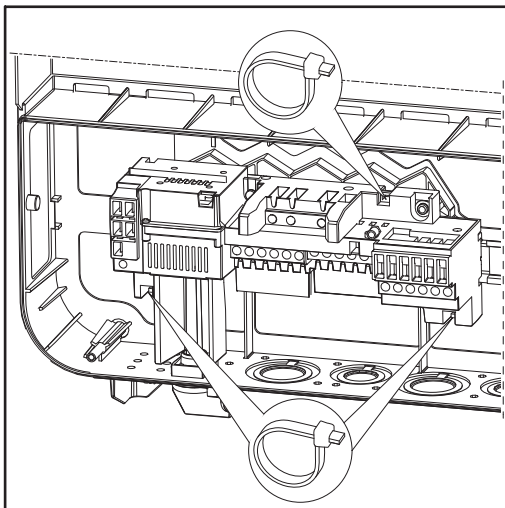

If excessively long AC or DC cables are laid in loops in the connection area, fix the cables to the designated eyelets at the top and bottom of the connection block using cable ties.


**Maximum AC fuse protection**

**Power circuit breaker**

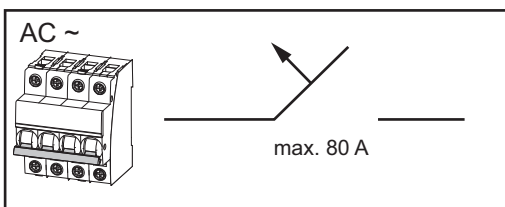

Inverter	Phases	AC power	Maximum fuse protection
Fronius Symo 10.0-3 208-240	3+N	10,000 W	C 80 A
Fronius Symo 12.0-3 208-240	3+N	12,000 W	C 80 A
Fronius Symo 10.0-3 480	3+N	10,000 W	C 80 A
Fronius Symo 12.5-3 480	3+N	12,500 W	C 80 A
Fronius Symo 15.0-3 480	3+N	15,000 W	C 80 A
Fronius Symo 15.0-3 208	3+N	15,000 W	C 80 A
Fronius Symo 17.5-3 480	3+N	17,500 W	C 80 A
Fronius Symo 20.0-3 480	3+N	20,000 W	C 80 A
Fronius Symo 22.7-3 480	3+N	22,700 W	C 80 A
Fronius Symo 24.0-3 480	3+N	24,000 W	C 80 A

**RCCB**

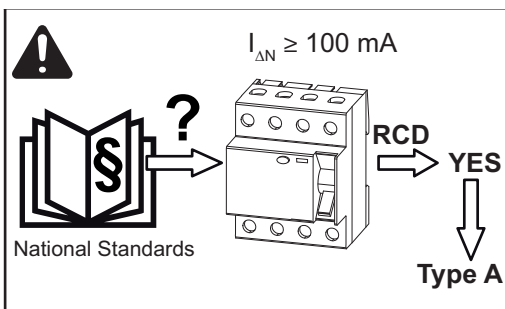

**NOTE!**

**A residual current circuit breaker for the AC connecting cable may be required depending on local regulations, the grid operator, and other conditions.**

A type A residual current circuit breaker with a trip current of at least 100 mA is generally sufficient in this case. However, false alarms can be triggered for the residual current circuit breaker type A in individual cases and depending on local conditions. For this reason, Fronius recommends that you use a residual current circuit breaker suitable for frequency converters.

---

---

**Additional external AC and/or DC disconnect**

Depending on the installation, an additional external AC and/or DC disconnect may be required if the inverter is installed in a location not easily accessible to utility or fire personnel. Contact your local authorities for additional information.


**DC=**





# Notes on the Multi-MPP Tracker inverter

## Multi MPP Tracker – Inverter

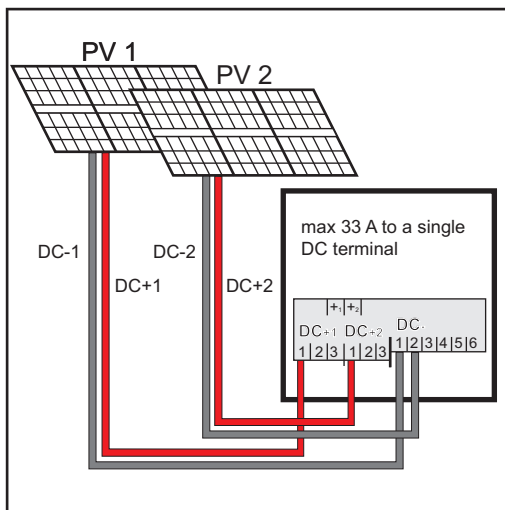

Connecting two solar module fields to a Multi MPP Tracker inverter


Multi MPP Tracker inverters have two independent DC inputs (MPP Tracker). These inputs can be connected to a number of different modules.

Each MPP Tracker has 3 DC+ terminals. There are a total of six DC- terminals.

Connecting two–six strings in Multi MPP Tracker mode:

Connect the strings separately to the two MPP Tracker inputs (DC+1/DC+2). The DC- terminals can be used as desired, since they are connected internally.

Set MPP TRACKER 2 to "ON" when starting for the first time (also subsequently possible in the basic menu)

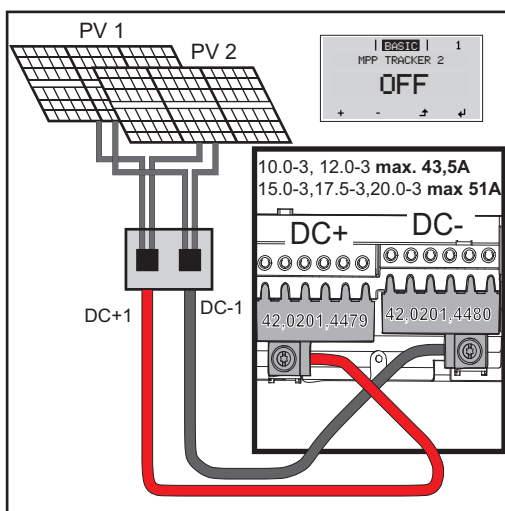

Connecting multiple combined solar module fields to a line on a Multi MPP Tracker inverter

Single MPP Tracker mode on a Multi MPP Tracker inverter:

If the inverter is being operated with an external string collection box, the DC connector kit (item numbers 42,0201,4479 and 42,0201,4480) must be used

Set MPP TRACKER 2 to "OFF" when starting for the first time (also subsequently possible in the basic menu)

If the Multi MPP Tracker inverter is operated in Single MPP Tracker mode, the currents of the connected DC lines are distributed evenly across both inputs.

# Connecting Solar Module Strings to the Inverter

---

## Safety



### WARNING!

#### **Danger from grid voltage and DC voltage from solar modules that are exposed to light.**

An electric shock can be fatal.

- ▶ Prior to all connection work, disconnect the AC and DC supply to the inverter.
  - ▶ The DC main switch is used only to switch off power to the power stage set. When the DC main switch is turned off, the connection area is still energized.
  - ▶ Maintenance and service work on the inverter power stage set should only be carried out by Fronius-trained service technicians.
  - ▶ All maintenance and service work should only be carried out when the inverter and the mounting bracket have been disconnected from each other.
  - ▶ The inverter must only be disconnected from the mounting bracket after being disconnected from the mains power.
  - ▶ Only an authorized electrician is permitted to connect this inverter to the public grid.
- 



### WARNING!

#### **Inadequately sized electrical components can cause serious injury and damage to property.**

An electric shock can be fatal.

- ▶ All electrical connections must be made in accordance with the national standard (e.g., for the US National Electrical Code, ANSI/NFPA 70) and any other regulations applicable to the installation site.
  - ▶ Use min. 194 °F (90 °C) copper wire for all grounding wires (see NEC table 250.122).
  - ▶ For all AC/DC wires, use a minimum of 167 °F (75 °C).
  - ▶ Voltage drop and other considerations, such as improving power quality, may mean larger cable cross sections need to be used.
- 



### WARNING!

#### **Danger from work that is not carried out properly**

This can result in damage to property and severe personal injury.

- ▶ The surge protection device should only be installed and connected by licensed electricians.
  - ▶ Observe the safety rules!
  - ▶ Prior to all installation and connection work, disconnect the AC and DC supply to the inverter.
- 



### CAUTION!

#### **Danger due to improperly connected terminals.**

This may result in thermal damage to the inverter, which in turn may lead to fires.

- ▶ When connecting the AC and DC cables, make sure that all terminals are tightened securely using the proper torque.
-

**⚠ CAUTION!**

**Danger due to overloading on the inverter.**

This may result in damage to the inverter.

- ▶ Observe the maximum current carrying capacity of the various power categories (see Table A).
- ▶ Only connect a maximum of 33 A to each DC terminal.
- ▶ Connect the DC+ and DC- cables to the correct DC+ and DC- terminals on the inverter.
- ▶ Observe the maximum DC input voltage.

<b>Table A</b>	
Power category	Maximum current carrying capacity MPP1 / MPP2
10.0-3 208–240/12.0-3 208–240/10.0-3 480/12.5-3 480	25 A / 16.5 A
15.0-3 208	50 A
15.0-3 480/17.5-3 480/20.0-3 480/22.7-3 480/24.0-3 480	33 A / 25 A

**NOTE!**

**Solar modules exposed to light supply current to the inverter.**

**NOTE!**

**When using the cable inlets at the back, take care to seal them according to protection class NEMA4X before operating outdoors.**

**NOTE!**

**When connecting aluminum cables:**

- ▶ follow all national and international guidelines regarding the connection of aluminum cables
- ▶ follow the instructions of the cable manufacturer
- ▶ perform an annual check to ensure that the cables are firmly attached according to the proper torque

**NOTE!**

**When connecting DC cables, ensure the polarity is correct.**

**NOTE!**

**Form a min. 4 in. (100 mm) cable loop with all cables.**

**String Fuses**

**Only applies to device type Fronius Symo 15.0-3 208 and device types Fronius Symo 15.0-3 480 / 20.0-3 480 / 22.7-3 480 / 24.0-3 480 with the "Ecofuse" option:**

The use of string fuses in the Fronius Symo provides additional fuse protection for solar modules.

The maximum short circuit current  $I_{SC}$ , the maximum module backfeed current  $I_R$  and the specification of the maximum string fuse value in the module data sheet of the respective

solar module are decisive factors in the protection of the solar module.

**The maximum short circuit current  $I_{SC}$  per terminal is 15 A.**

The string fuse release current can be set to greater than 15 A if required. However, a release current of 20 A must not be exceeded.

If the inverter is being operated with an external string collection box, the DC connector kit 25 (item numbers 42,0201,4479 for DC+ and 42,0201,4480 for DC-) must be used. In this case the solar modules are externally protected in the string collection box and the metal bolts should be used in the inverter.

National regulations regarding fuse protection must be observed. The electrical engineer carrying out the installation is responsible for the correct choice of string fuses.


**⚠ CAUTION!**

**Danger due to faulty fuses.**

This can result in fire.

- Only replace faulty fuses with new ones of the same rating.

The inverter is delivered with metal bolts as standard.

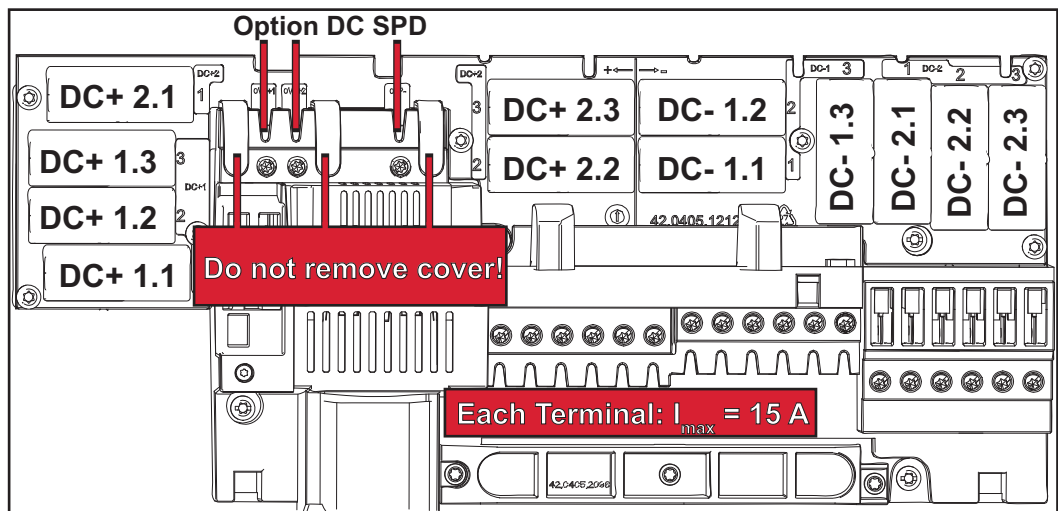

**Permitted Cables** AC cables with the following design can be connected to the AC terminals of the inverter:

- Cu / Al Cu
- Copper (Cu) or aluminum (Al): round, solid
  - Copper: round, stranded, up to conductor class 4

**AC & DC = copper cables (Cu)**  
 The following wire combinations can be used for wiring.  
 Select a sufficiently large cable cross-section based on the actual device output!

AWG round	AWG stranded	AWG stranded/round			AWG round/round			AWG stranded/stranded			
4 <sup>2)</sup>											
6 <sup>2)</sup>	6/6 <sup>4)</sup>							6/12 <sup>2)</sup>	6/14 <sup>2)</sup>	6/16 <sup>3)</sup>	
8 <sup>2)</sup>	8 <sup>1)</sup>	8/10 <sup>1)</sup>	8/12 <sup>1)</sup>	8/14 <sup>1)</sup>		8/12 <sup>2)</sup>		8/10 <sup>2)</sup>	8/12 <sup>1)</sup>	8/14 <sup>1)</sup>	8/16 <sup>3)</sup>

**AC & DC = copper cables (Cu)**

The following wire combinations can be used for wiring.  
Select a sufficiently large cable cross-section based on the actual device output!

AWG round	AWG stranded	AWG stranded/round			AWG round/round				AWG stranded/stranded			
10 <sup>2)</sup>	10 <sup>1)</sup>				10/10 <sup>1)</sup>	10/12 <sup>1)</sup>	10/14 <sup>1)</sup>		10/10 <sup>1)</sup>	10/12 <sup>1)</sup>	10/14 <sup>1)</sup>	10/16 <sup>3)</sup>
12 <sup>2)</sup>	12 <sup>1)</sup>				12/10 <sup>1)</sup>	12/12 <sup>1)</sup>	12/14 <sup>1)</sup>	12/16 <sup>1)</sup>	12/10 <sup>1)</sup>	12/12 <sup>1)</sup>	12/14 <sup>1)</sup>	12/16 <sup>1)</sup>
14 <sup>2)</sup>	14 <sup>1)</sup>				14/10 <sup>1)</sup>	14/12 <sup>1)</sup>	14/14 <sup>1)</sup>	14/16 <sup>1)</sup>	14/10 <sup>1)</sup>	14/12 <sup>1)</sup>	14/14 <sup>1)</sup>	14/16 <sup>1)</sup>
16 <sup>3)</sup>	16 <sup>3)</sup>						16/14 <sup>1)</sup>	16/16 <sup>1)</sup>	16/10 <sup>3)</sup>	16/12 <sup>1)</sup>	16/14 <sup>1)</sup>	16/16 <sup>1)</sup>

**AC & DC = aluminum cables (Al)**

The following wire combinations can be used for wiring.  
Select a sufficiently large cable cross-section based on the actual device output!

AWG round	AWG stranded	AWG stranded/round			AWG round/round				AWG stranded/stranded			
4 <sup>2)</sup>												
6 <sup>2)</sup>	6 <sup>4)</sup>									6/12 <sup>2)</sup>	6/14 <sup>2)</sup>	6/16 <sup>5)</sup>
8 <sup>2)</sup>	8 <sup>2)</sup>	8/10 <sup>2)</sup>	8/12 <sup>2)</sup>	8/14 <sup>2)</sup>		8/12 <sup>2)</sup>			8/10 <sup>2)</sup>	8/12 <sup>2)</sup>	8/14 <sup>2)</sup>	8/16 <sup>5)</sup>
10 <sup>2)</sup>	10 <sup>2)</sup>				10/10 <sup>2)</sup>	10/12 <sup>2)</sup>	10/14 <sup>2)</sup>		10/10 <sup>2)</sup>	10/12 <sup>2)</sup>	10/14 <sup>2)</sup>	10/16 <sup>5)</sup>
12 <sup>2)</sup>	12 <sup>2)</sup>				12/10 <sup>2)</sup>	12/12 <sup>2)</sup>	12/14 <sup>2)</sup>		12/10 <sup>2)</sup>	12/12 <sup>2)</sup>	12/14 <sup>2)</sup>	12/16 <sup>2)</sup>
14 <sup>2)</sup>	14 <sup>2)</sup>				14/10 <sup>2)</sup>	14/12 <sup>2)</sup>	14/14 <sup>2)</sup>	14/16 <sup>2)</sup>	14/10 <sup>2)</sup>	14/12 <sup>2)</sup>	14/14 <sup>2)</sup>	14/16 <sup>2)</sup>
16 <sup>5)</sup>	16 <sup>5)</sup>						16/14 <sup>2)</sup>	16/16 <sup>2)</sup>	16/10 <sup>5)</sup>	16/12 <sup>2)</sup>	16/14 <sup>2)</sup>	16/16 <sup>2)</sup>

- 1) tested and inspected as per UL
- 2) not inspected as per UL; connection possible
- 3) with ferrules only
- 4) use stranded PV (ZKLA) or 2-wire
- 5) not inspected as per UL; connection possible; AWG 16 with ferrules only

**Minimum AWG as per NEC**

		10.0-3 208-240	12.0-3 208-240	15.0-3 208
Copper (Cu)/aluminum (Al)	208 V <sub>AC</sub>	AWG 10/AWG 10	AWG 10/AWG 8	AWG 8/AWG 6
	220 V <sub>AC</sub>	AWG 10/AWG 10	AWG 10/AWG 8	
	240 V <sub>AC</sub>	AWG 12/AWG 10	AWG 10/AWG 10	

		10.0-3 480	12.5-3 480	15.0-3 480
Copper (Cu)/aluminum (Al)	440 V <sub>AC</sub>	AWG 14/AWG 12	AWG 14/AWG 12	AWG 14/AWG 12
	480 V <sub>AC</sub>	AWG 14/AWG 12	AWG 14/AWG 12	AWG 14/AWG 12

		17.5-3 480	20.0-3 480	22.7-3 480
Copper (Cu)/aluminum (Al)	440 V <sub>AC</sub>	AWG 12/AWG 10	AWG 10/AWG 10	AWG 10/AWG 8
	480 V <sub>AC</sub>	AWG 14/AWG 12	AWG 12/AWG 10	AWG 10/AWG 10

		24.0-3 480
Copper (Cu)/aluminum (Al)	480 V <sub>AC</sub>	AWG 10/AWG 10

---

## General Information about Solar Modules

In order to select suitable solar modules, observe the following points:

- The open circuit voltage of the solar modules increases as the temperature decreases, assuming constant irradiance. The open circuit voltage may not exceed the following values, depending on the altitude:

### Symo 10.0-3 – 12.0-3 208–240

0 to 11,154 ft (0 to 3400 m = 600 V )

### Symo 10.0-3 – 24.0-3 480

0 to 6561 ft. (0 to 2000 m) = 1000 V  
6531 to 8202 ft. (2000 to 2500 m) = 950 V  
8202 to 9842 ft. (2500 to 3000 m) = 900 V  
9842 to 11,154 ft (3000 to 3400 m = 850 V )

- If the open circuit voltage exceeds the values stated above, the inverter may be damaged and all warranty rights will become null and void as the inverter records the last DC voltage in the system meaning that non-compliance with the maximum permitted limits can be checked.
- Note the temperature coefficients in the solar module data sheet
- More exact data for sizing the solar modules for the particular location can be obtained using calculation tools such as the Fronius Solar.configurator (available at <https://www.solarweb.com>).
- See NEC table 690.7 for the appropriate voltage adjustment factor for crystalline silicon solar modules, or use the manufacturer's specified voltage coefficients.

## NOTE!

**Before connecting solar modules, make sure that the voltage specified by the manufacturer corresponds to the actual measured voltage.**

- Note the safety instructions and specifications of the solar module manufacturer regarding solar module grounding.
- 

---

## Connecting Aluminum Cables

The DC-side terminals are designed for connecting single-wire, round aluminum cables. Due to the reaction of aluminum with air that creates a tough, non-conductive oxide layer the following points must be considered when connecting aluminum cables:

- Reduced rated currents for aluminum cables
- The connection requirements listed below

**Notice!** Always follow the instructions of the cable manufacturer when using aluminum cables.

**Notice!** Take into account local specifications when configuring cable cross sections.

### Connection Requirements:

- 1 Carefully clean off the oxide layer of the stripped end of the cable, e.g. using a knife

**IMPORTANT!** Do not use brushes, files, or sandpaper; aluminum particles may get stuck and can transfer to other cables.

- 2 After removing the oxide layer of the cable end, rub in a neutral grease, e.g., acid-free and alkali-free Vaseline

**3** Then immediately connect it to the terminal

**IMPORTANT!** Repeat the steps above whenever the cable is disconnected and then re-connected.

**Connecting Solar Module Strings to the Inverter**

**⚠ CAUTION!**

**Danger due to incorrectly connected PV cables and voltage from the solar modules**  
This can result in damage to the inverter.

► Check the polarity and voltage of the solar module strings before connection. The voltage must not exceed the following values:

**Symo 10.0-3 - 12.0-3 208-240**

0-11,154 ft (0- 3400 m) = 600 V





**Symo 10.0-3 - 24.0-3 480**




0-6561 ft (0-2000 m) = 1000 V

6531- 8202 ft (2000-2500 m) = 950 V

8202-9842 ft (2500-3000 m) = 900 V

9842-11,154 ft (3000-3400 m) = 850 V

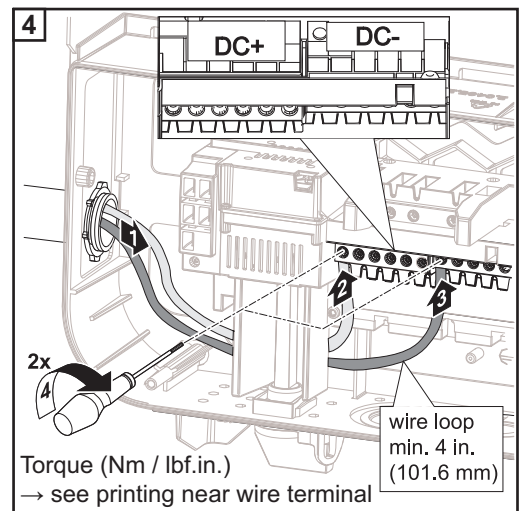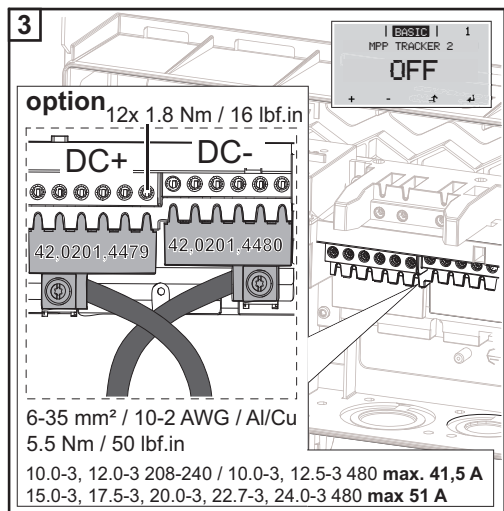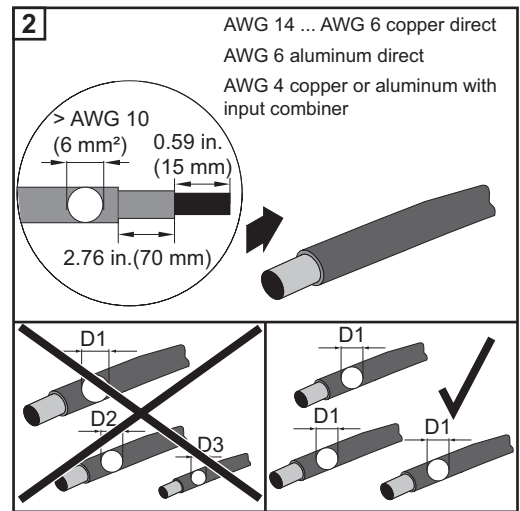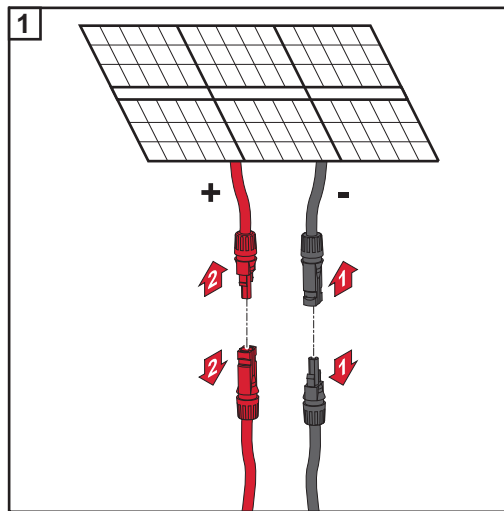

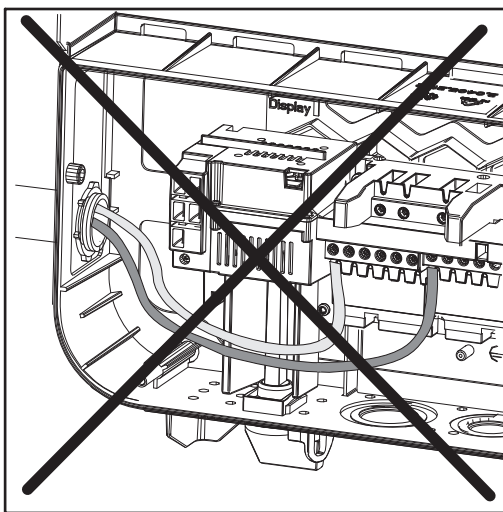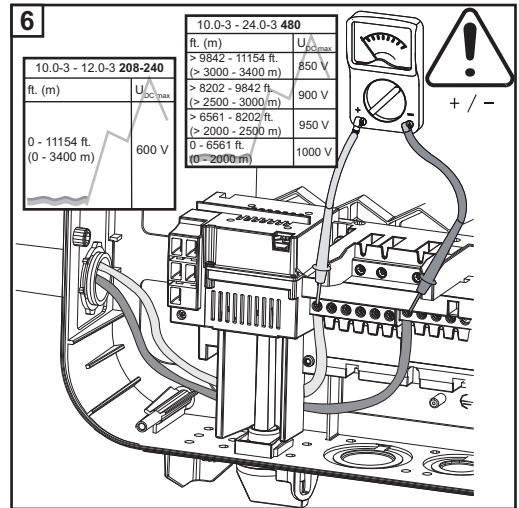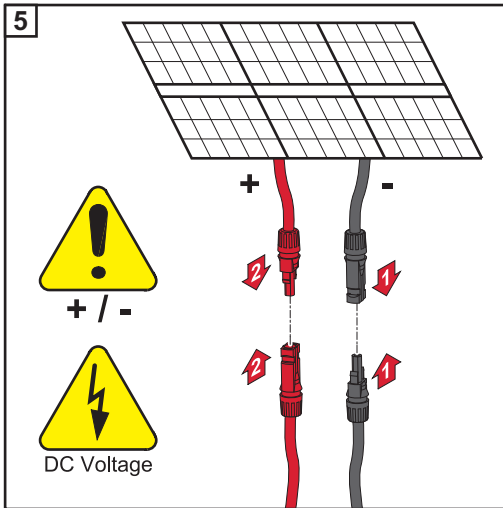

If DC cables are laid over the shaft of the DC main switch or across the DC main switch connection block, the cables may be damaged when the inverter is pivoted or the inverter may not be able to be pivoted.

**IMPORTANT!** Do not lay DC cables over the shaft of the DC main switch or across the DC main switch connection block!










# **Laying Solar.Net Cables**



# Data communication

## Lay data communication cables

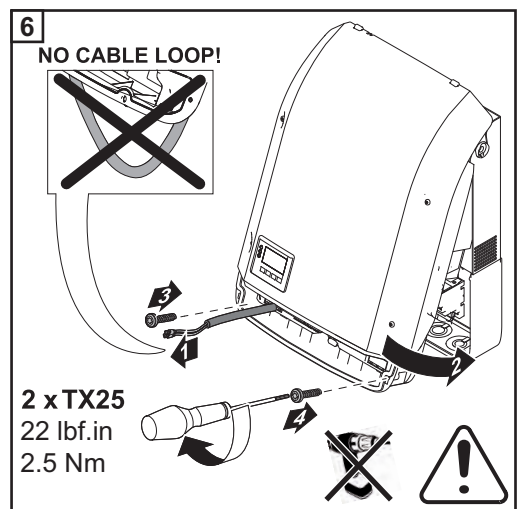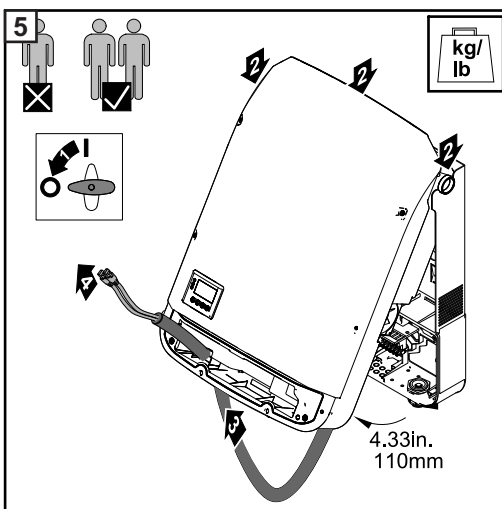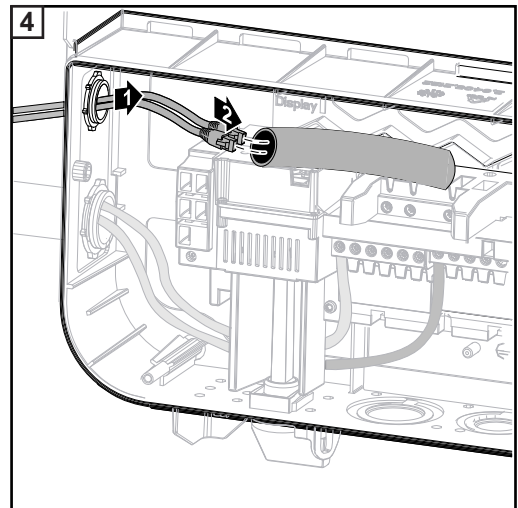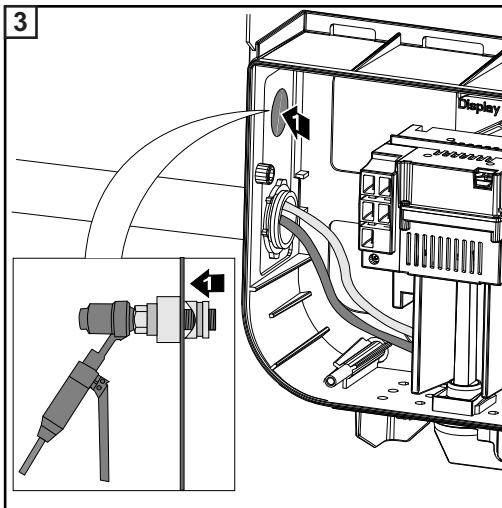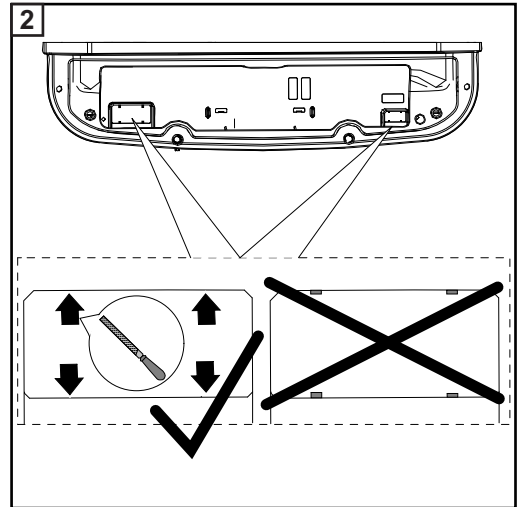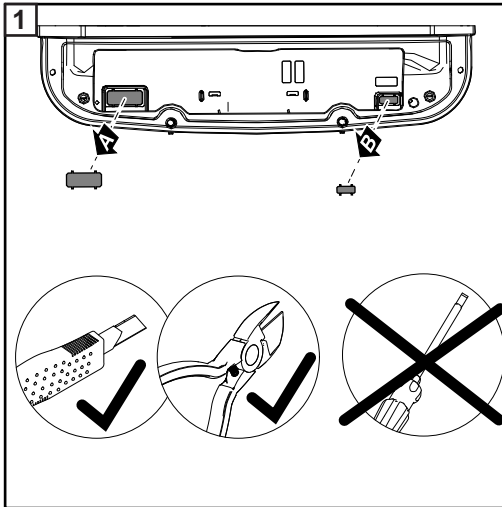

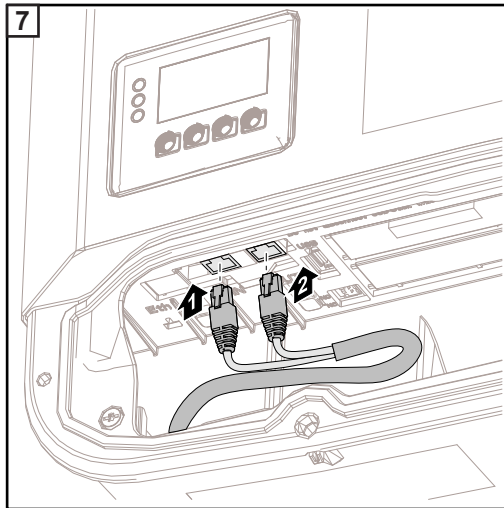

**IMPORTANT!** If data communication cables are wired into the inverter, observe the following points:

- Provide separate conduits for data communication cables
- Lay data communication cables in the supplied conduit
- Knock out the appropriate opening
- Cleanly deburr the knocked-out opening
- Clip the inverter onto the mounting bracket
- Guide the data communication cables through the cable glands from behind
- When pivoting the inverter, ensure that the cables are not trapped, kinked, or damaged in any other way. Do not loop the data communication cables.
- Lay the data communication cables in the data communication area of the inverter and connect to the Solar.Net “IN” and “OUT” connections. Plug the termination plugs into the remaining Solar.Net connections.

### Installing Data-manager in the Inverter



#### **WARNING!**

#### **Danger of residual voltage from capacitors.**

An electric shock can be fatal.

- ▶ Wait until the capacitors have discharged. Discharge takes 5 minutes.



#### **WARNING!**






#### **An inadequate ground conductor connection can cause serious injury and damage to property.**

- ▶ The housing screws provide an adequate ground conductor connection for grounding the housing and should not be replaced under any circumstances by other screws that do not provide a reliable ground conductor connection.

**IMPORTANT!** Follow general ESD guidelines when handling option cards.

**IMPORTANT!** Only one Fronius Datamanager in master mode is permitted per Fronius Solar.Net Ring. Switch other Fronius Datamanagers to slave mode or remove them. Unused option card slots can be closed by replacing the cover (item number 42,0405,2094), or an inverter without Fronius Datamanager (light version) can be used.

**IMPORTANT!** Only knock out one opening for the PC board when installing a data manager in the inverter.

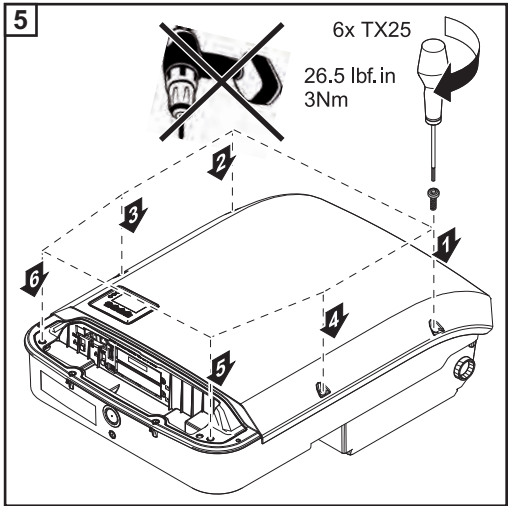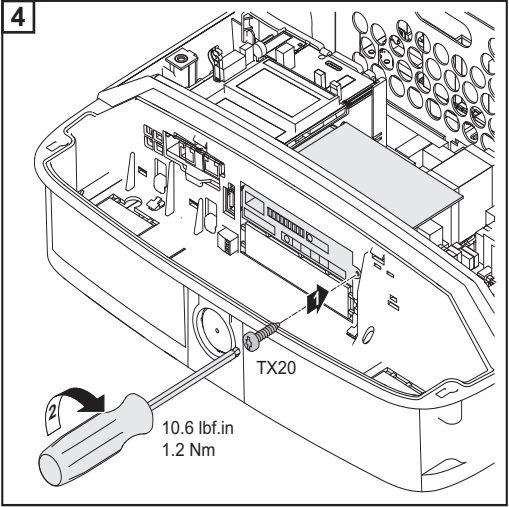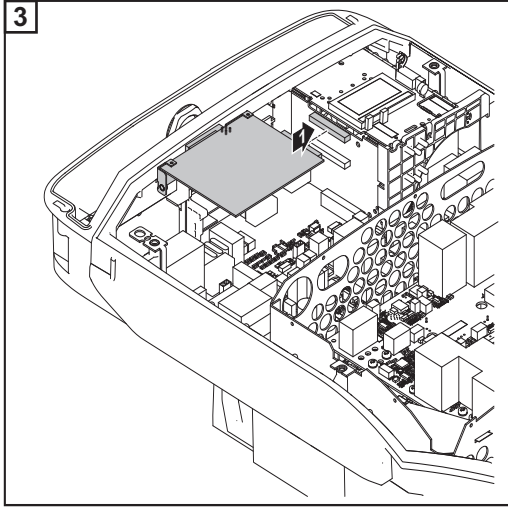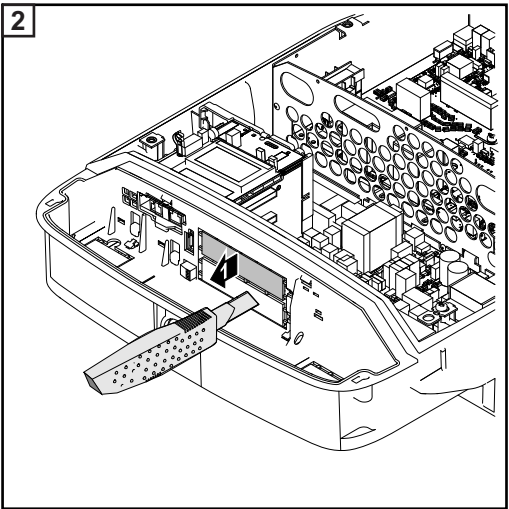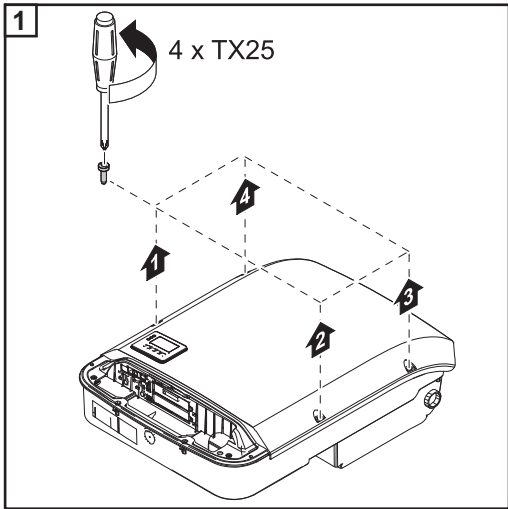




**Finally...**





# Seal Conduits


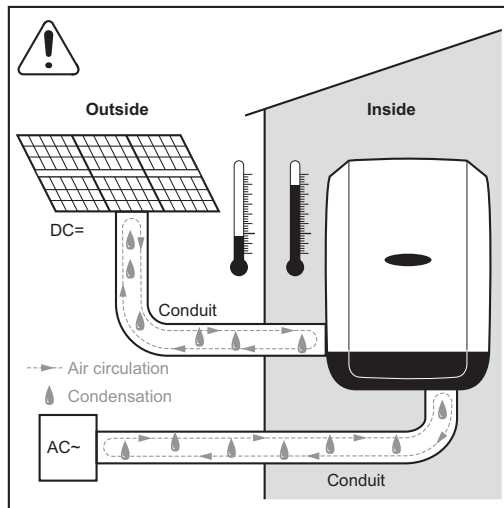


**NOTE!**

Condensation in the conduits can damage the inverter or the photovoltaic system components.

To avoid undesirable air circulation and condensation in the conduits:

- ▶ seal all conduits in use with a permanently elastic sealant
- ▶ seal every incoming and outgoing conduit
- ▶ seal both conduit ends.

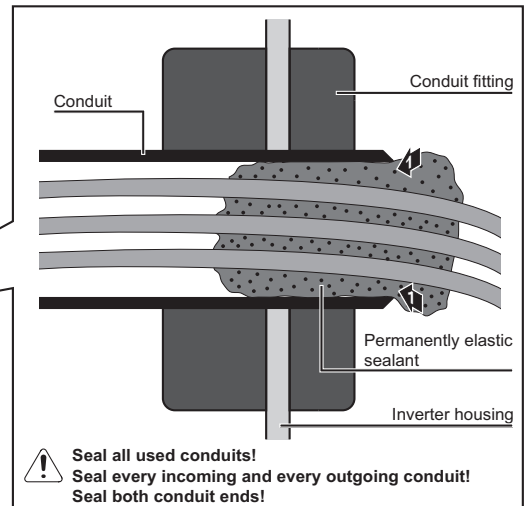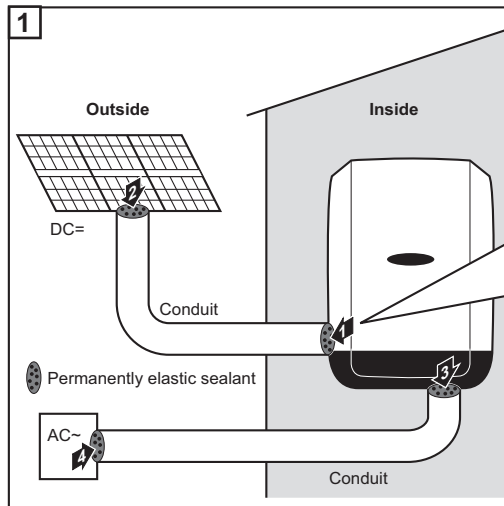

- ▶ Seal all used conduits!
- ▶ Seal every incoming and every outgoing conduit!
- ▶ Seal both conduit ends!

# Clipping the Inverter onto the Mounting Bracket

## Clipping the Inverter onto the Mounting Bracket



### WARNING!

#### **Danger due to inadequate ground conductor connection.**

This can result in severe personal injury and damage to property.

- ▶ The housing screws provide an adequate ground conductor connection for grounding the housing and should not be replaced under any circumstances by other screws that do not provide a reliable ground conductor connection.

Due to the high weight, two people are required to clip the inverter into the mounting bracket.

### NOTE!

#### **The inverter is fitted with a lock for safety reasons, which allows the inverter to be pivoted in the mounting bracket only when the DC main switch is off.**

- ▶ Only clip on and pivot the inverter in the mounting bracket when the DC main switch is off.
- ▶ Do not use excessive force to clip on the inverter and pivot it.

The fixing screws in the data communication area of the inverter are used to fix the inverter to the mounting bracket. Fixing screws must be properly tightened to ensure correct contact between the inverter and the mounting bracket.



### CAUTION!

#### **Danger due to improperly tightened fixing screws.**

When the inverter is in operation, this can result the formation of arcs, which in turn may lead to fires.






- ▶ Always tighten the fixing screws with the specified torque.






**Over torquing with an electric drill will void the warranty**

Use a torque screwdriver to insert the screws into the inverter. Do not use a conventional cordless screwdriver – the tightening torque will not be sufficiently accurate.

Before attaching the Datcom cover, check the seals on the back for damage. If there is damage, replacement covers (DatCom Cover Upgrade Kit) must be ordered.

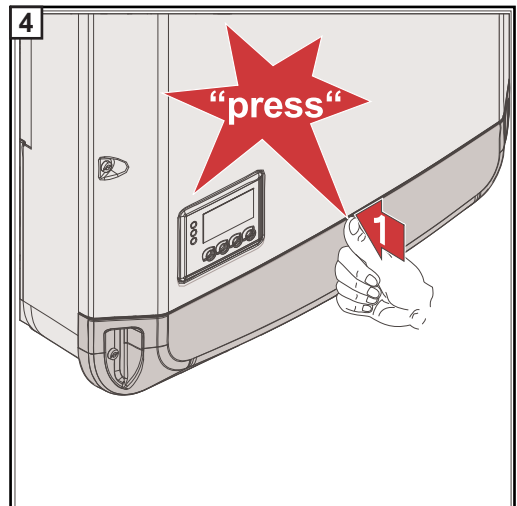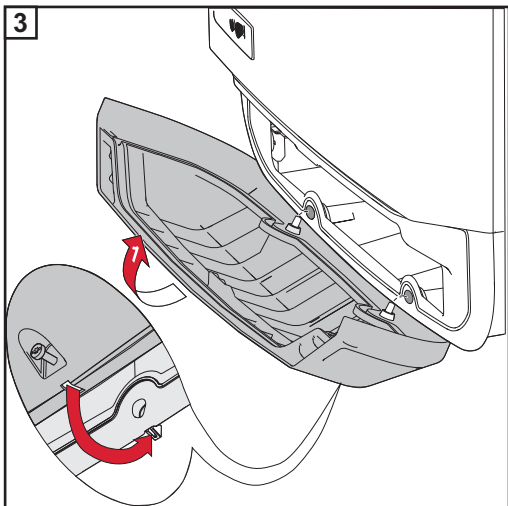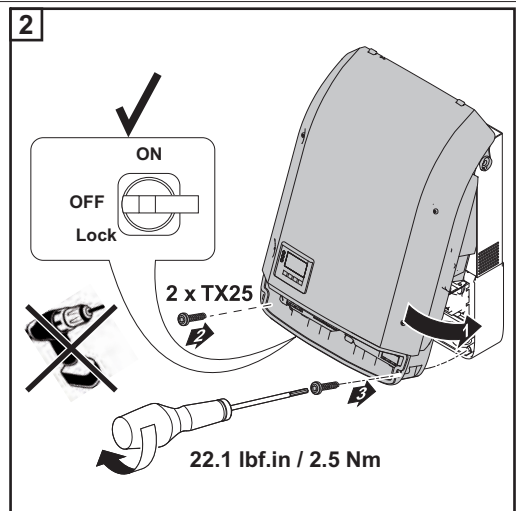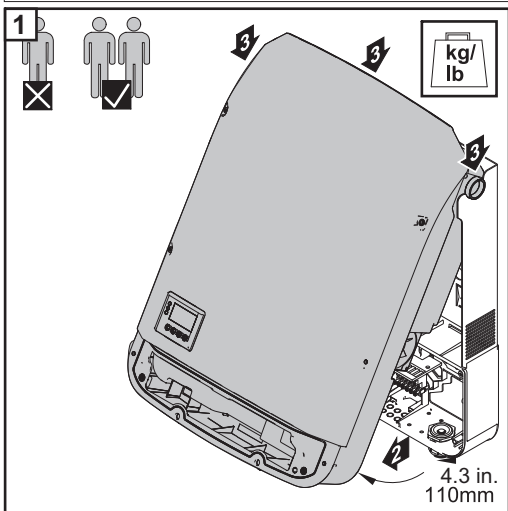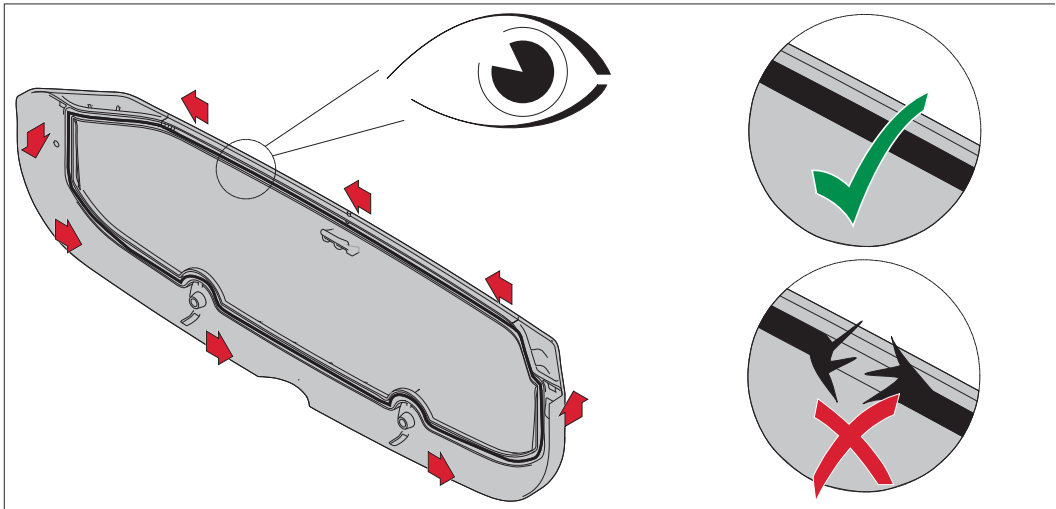

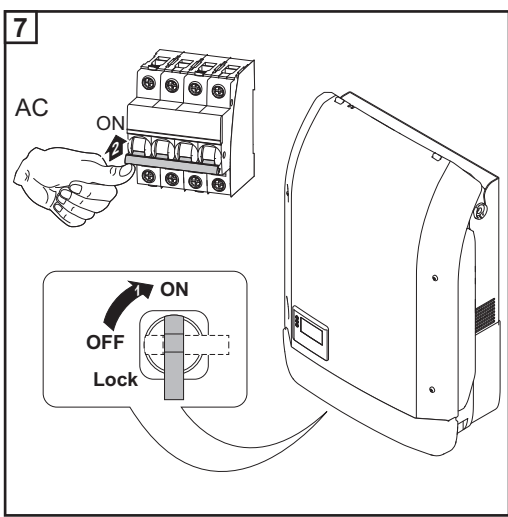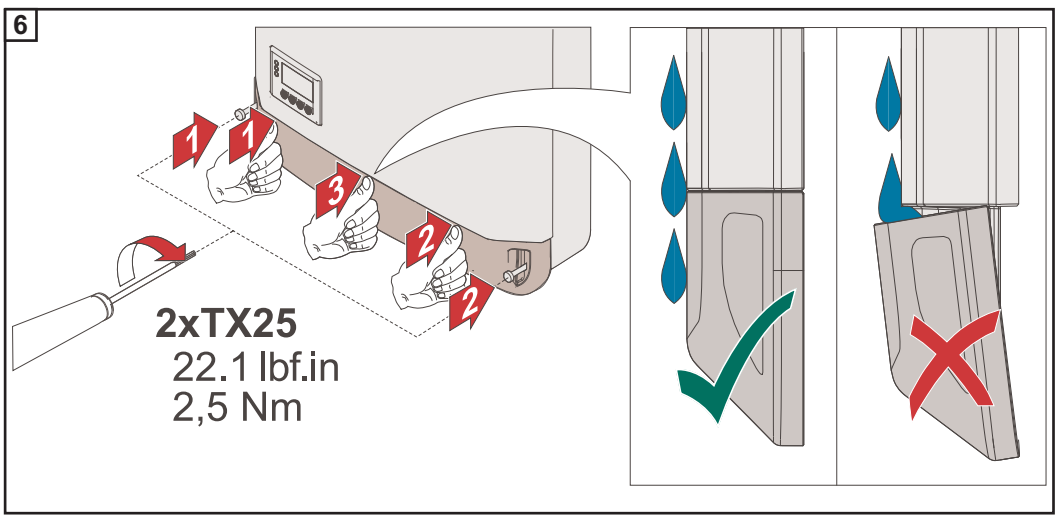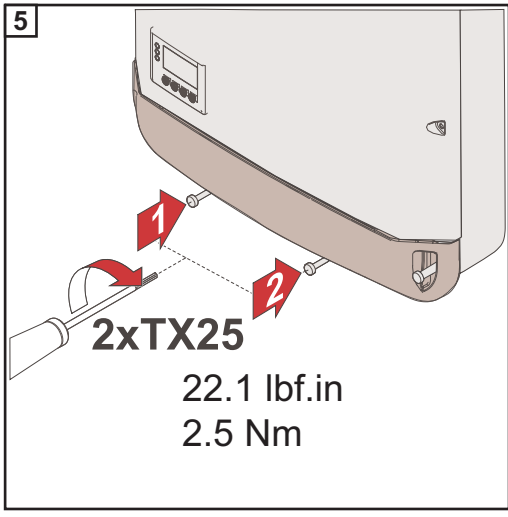

# Using for the first time

## Using the Inverter for the First Time

 **WARNING!**

**Danger from incorrect operation and work that is not carried out properly.**

This can result in severe personal injury and damage to property.

- ▶ Only qualified staff are authorized to commission the inverter and only within the scope of the respective technical regulations.
- ▶ Read the Installation Instructions and Operating Instructions before installation and commissioning.

When starting up the inverter for the first time, various setup settings must be selected.

If setup is stopped before it is completed, it can be started again via an AC reset. An AC reset can be carried out by switching the automatic circuit breaker off and on again.

The country setup can only be set when starting the inverter for the first time. If the country setup needs to be changed at a later date, contact your technical support.



### Setups:

#### Symo 208 – 240

- 240N (with NL-Mon)
- 240 (without NL-Mon)
- 208N (with NL-Mon)
- 208 (without NL-Mon)
- 220N (with NL-Mon)
- 220 (without NL-Mon)
- 50 HZ
- 50 HN (with NL-Mon)
- BR N (Brazil 220 V with NL-Mon)
- BR (Brazil 220 V without NL-Mon)
- HI1 (Hawaii 240 V with NL-Mon)
- HI2 (Hawaii 208 V with NL-Mon)


#### Symo 208 – 240


- MG1N\* (Microgrid 240V with NL-Mon)
- MG1P\* (Microgrid 240 V without NL-Mon)
- MG2N\* (Microgrid 220V without NL-Mon)
- MG3N\* (Microgrid 208 V without NL-Mon)
- MG3P\* (Microgrid 208 V without NL-Mon)

#### Symo 480

- 480N (with NL-Mon)
- 440N (with NL-Mon)
- 50HN (with NL-Mon)
- CAL3 (California 480 V with NL-Mon)
- HI3 (Hawaii with NL-Mon)
- MG5N\* (Microgrid 240 V with NL-Mon)
- MG6\* (Microgrid)

\* For more information about "Field Adjustable Trip Points" and "Special Purpose Utility-Interactive" see [www.fronius.com/QR-link/42042102339](http://www.fronius.com/QR-link/42042102339)

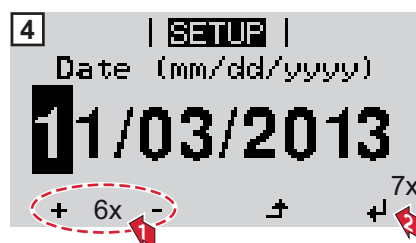

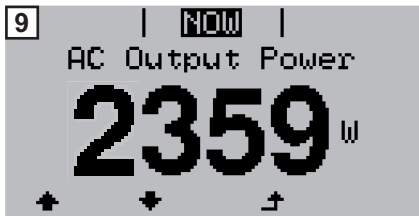

# Options





# USB Stick as a Data Logger and for Updating Inverter Software

## USB Flash Drive as a Data Logger

A USB flash drive connected to the USB A socket can act as a data logger for an inverter.

The logging data that is saved on the USB flash drive can be viewed directly in third-party applications (e.g., Microsoft® Excel) at any time via the included CSV file.

Older Excel versions (up to Excel 2007) have a row limit of 65536.


## Data on the USB stick

If the USB stick is used as a datalogger, three files are automatically created:

- FRONIUS.sys system file:  
This file saves information from the inverter that is irrelevant to the customer. The file must not be deleted individually. Only delete all files together (sys, fld, csv).
- DALO.fld log file:  
Log file for reading out data in Fronius Solar.access.

You can find additional information on the Fronius Solar.access Software in the "DAT-COM Detail" operating instructions at <http://www.fronius.com>

- DATA.csv log file:  
A log file for reading out data in a spreadsheet program (e.g., Microsoft® Excel)

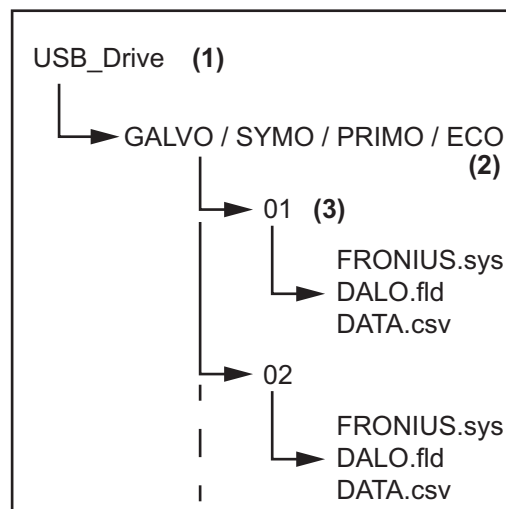

- (1) USB root directory
- (2) Fronius inverter (Fronius Galvo, Fronius Symo, Fronius Primo, or Fronius Eco)
- (3) Inverter number – can be set in the setup menu under DATCOM

If multiple inverters exist with the same inverter number, the three files are saved in the same folder. A number is appended to the file name (e.g., DALO\_02.fld)

Data structure on the USB stick

Structure of the CSV file:

	(1)	(2)	(3)	(4)	(5)	(6)	(7)	
	A	B	C	D	E	F	G	H
1	SerialNr.:123456789987456321'							
2	Date	Time	Inverter No.	Device Type	Periode [s]	Energy [Ws]	Energy L[Var]	Energy C[Var]
3	30.03.2013	17:15:19	1	247				
4	30.03.2013	17:15:19	1	247				
5	30.03.2013	17:15:19	1	247				
6	30.03.2013	17:15:20	1	247				

I	J	K	L	M	N	O	P	Q	R	S
Uac L1 [V]	Uac L2 [V]	Uac L3 [V]	Iac L1 [A]	Iac L2 [A]	Iac L3 [A]	Udc S1[V]	Idc S1[A]	Description		
								Display Information		
								V0.1.5 Build 0		
								28.03.2013 23:59:49 Info 017, Counter 0092		
								Logging Start		

- (1) ID
- (2) Inverter no.
- (3) Inverter type (DATCOM code)
- (4) Logging interval in seconds
- (5) Energy in watt-seconds with reference to the logging interval
- (6) Inductive reactive power
- (7) Capacitive reactive power
- (8) Averages over the logging interval (AC voltage, AC current, DC voltage, DC current)
- (9) Additional information

### Data Amount and Memory Capacity

One USB thumb drive with a memory capacity of 1 GB, for example, can record logging data at a logging interval of 5 minutes for approx. 7 years.

#### CSV file

CSV files can store only 65,535 rows (data records) (up to Microsoft® Excel version 2007, afterwards there is no limit).

At a logging interval of 5 minutes, the 65,535 rows are written within approx. 7 months (CSV data size of approx. 8 MB).

To avoid a loss of data, the CSV file should be backed up to a PC within these 7 months and deleted from the USB thumb drive. If the logging interval is set longer, this time frame is extended accordingly.

#### FLD file

The FLD file should not be larger than 16 MB. At a logging interval of 5 minutes, this corresponds to a storage duration of approx. 6 years.

If the file exceeds this 16 MB limit, it should be backed up to a PC, and all data should be deleted from the USB thumb drive.

After you have backed up the data and removed it from the USB thumb drive, the thumb drive should be immediately reinserted so that it can record logging data; no further steps are required.

**Notice!** A full USB thumb drive can lead to loss of data or overwriting of data. When inserting the USB thumb drive, make sure that it has a sufficient memory capacity.

#### NOTE!

##### Risk from a full USB thumb drive.

This can result in the loss of data or data being overwritten.

- ▶ When inserting the USB thumb drive, make sure that it has a sufficient memory capacity.

## Buffer Memory

If the USB flash drive is removed (e.g., to back up data), the logging data is written to a buffer memory in the inverter. As soon as the USB flash drive is reinserted, the data is automatically transferred from the buffer memory to the USB flash drive.

The buffer memory can store a maximum of 6 logging points. Data is logged only during inverter operation (power greater than 0 W). The logging interval is set to 30 minutes. This results in a time span of 3 hours for recording data in the buffer memory.

When the buffer memory is full, the oldest data in the buffer memory is written over with the new data.

**IMPORTANT!** The buffer memory requires a constant power supply.

If there is an AC power outage during operation, all data in the buffer memory is lost. The automatic night switch-off must be deactivated so that data is not lost at night (set "Night Mode" setup parameter to ON – see the Operating Instructions for Datamanager 2.0 and the sections "Setting and Displaying Menu Items," "Displaying and Setting Parameters in the 'DATcom' Menu Item").

For Fronius Eco or Fronius Symo 15.0-3 208, the buffer memory also works with pure DC voltage.

## Suitable USB Thumb Drives

Due to the number of USB thumb drives on the market, we cannot guarantee that every USB thumb drive will be recognized by the inverter.


Fronius recommends using only certified, industrial USB thumb drives (look for the USB-IF logo).

The inverter supports USB thumb drives using the following file systems:

- FAT12
- FAT16
- FAT32

Fronius recommends that the USB thumb drive only be used for recording logging data or for updating the inverter software. USB thumb drives should not contain any other data.

USB symbol on the inverter display, e.g., in the 'NOW' display mode:

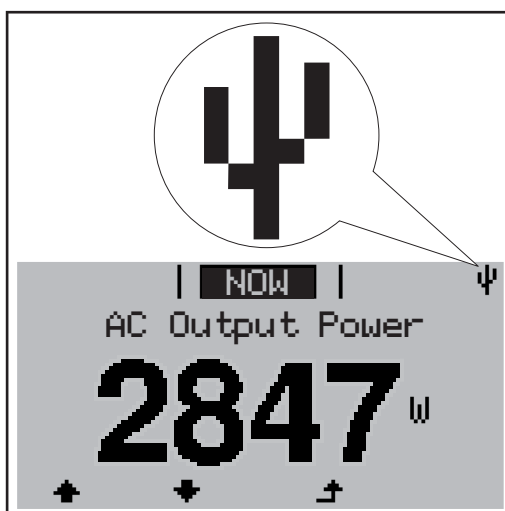

When the inverter recognizes a USB thumb drive, the USB symbol will appear at the top right of the display.

When inserting the USB thumb drive, make sure that the USB symbol is displayed (it may also be flashing).

**Notice!** Please be aware that in outdoor applications the USB thumb drive may only function in a limited temperature range.  
Make sure, for example, that the USB thumb drive will also function at low temperatures for outdoor applications.

---


**USB Stick for Updating Inverter Software**

The USB stick can be used to help end customers update inverter software via the USB menu item in the SETUP menu item: the update file is first saved on the USB stick and then transferred to the inverter. The update file must be saved in the USB stick root directory.

---

**Removing the USB Stick**

Safety information for removing a USB stick

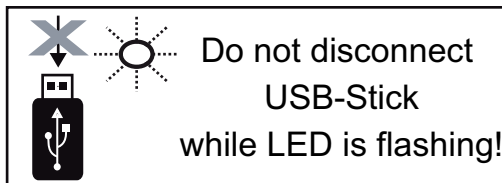


**IMPORTANT!** To prevent a loss of data, the connected USB stick should only be removed under the following conditions:

- via the SETUP and "Safely remove USB / hardware" menu items
- when the "Data Transfer" LED is no longer flashing or illuminated.

# Options


## Options

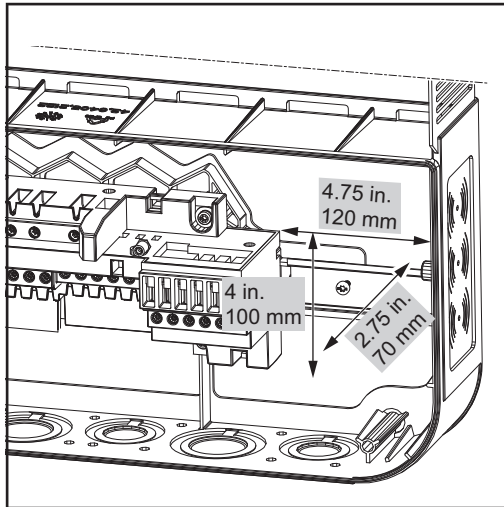

**NOTE!**

A DIN rail is provided in order to mount accessory electrical devices including, but not limited to, overcurrent protection, metering, radio or cellular modem. Maximum size for mounting of all devices is 4 w x 4.75 l x 2.75 inches. The installer takes responsibility for any undesired effect on the inverter by installing an electrical device in this area. Caution should be taken when installing a device that may output significant amounts of heat or radio interference. Always ensure that the device does not inhibit the inverter from closing and sealing properly. Any questions about device eligibility should be directed toward technical support.

### OPTION 'ShadeCover'

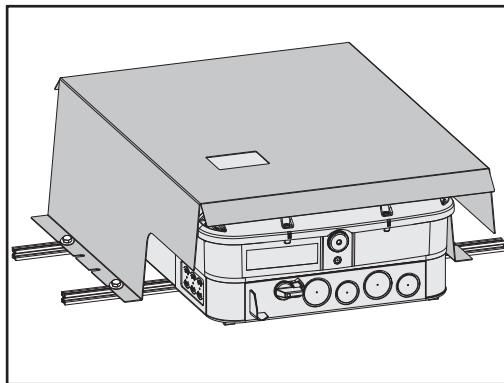

- Use the ShadeCover when the inverter is exposed to direct sunlight
- Use 4 screws for proper mounting



**NO MOUNTING**



# **Service and Maintenance**





# Notes on Maintenance

---

## Maintenance

**Notice!** For a horizontal installation position and installation outside: perform an annual check to ensure that all screw connections are tightly fastened.

Maintenance and service work may only be carried out by Fronius-trained service technicians.

---

## Cleaning

Wipe the inverter, if necessary, with a damp cloth.

Do not use cleaning agents, scouring agents, solvents, or similar products to clean the inverter.





**FRONIUS INTERNATIONAL GMBH**

Froniusstraße 1, A-4643 Pettenbach, Austria

E-Mail: [sales@fronius.com](mailto:sales@fronius.com)

[www.fronius.com](http://www.fronius.com)

Under [www.fronius.com/contact](http://www.fronius.com/contact) you will find the addresses  
of all Fronius Sales & Service Partners and locations